

**Agilent 4352B Revision 02.00 Firmware  
Installation Kit (04352-65403)**

# **Installation Manual**



**Agilent Part No. 04352-90115  
Printed in JAPAN July 2000**

---

## **Notice**

The information contained in this document is subject to change without notice.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of the Agilent Technologies.

Agilent Technologies Japan, Ltd.  
Component Test PGU-Kobe  
1-3-2, Murotani, Nishi-ku, Kobe-shi,  
Hyogo, 651-2241 Japan

---

## Typeface Conventions

**HARDKEYS**

Labeled keys on the instrument front panel are enclosed in □.

**SOFTKEYS**

Softkeys located to the right of the LCD are enclosed in ▤.

---

## Safety Symbols

General definitions of safety symbols used on equipment or in manuals.

**Note**



**Note** denotes important information. It calls attention to a procedure, practice, condition or the like, which is essential to highlight.



## General Information

---

### Introduction

This chapter describes the Kit and lists the contents of the Kit.

---

### The Firmware Installation Kit

The purpose of this kit is to install the firmware to 4352B. The kit is used for firmware upgrades, and for firmware installation after repairing the A1 CPU board.

---

### Contents of the Firmware Installation Kit

See Table 1-1 for the kit contents. If anything is missing, contact the nearest Agilent Technologies office.

**Table 1-1. Contents of the Kit**

<b>Part Number</b>	<b>Description</b>	<b>Qty.</b>
04352-18006	Flexible Disk (Rev 02.00)	1
5080-3950	Label "Firmware Rev 02.00"	1
04352-90115	Installation Manual (This manual)	1



# Installation

---

## Introduction


This chapter describes the firmware installation procedure.

---

## Firmware Installation Procedure

Perform the following steps to install the firmware into the 4352B.


1. While pressing **Presets** key, turn on the 4352B. The bootloader screen as shown in Figure 2-1 will be displayed.

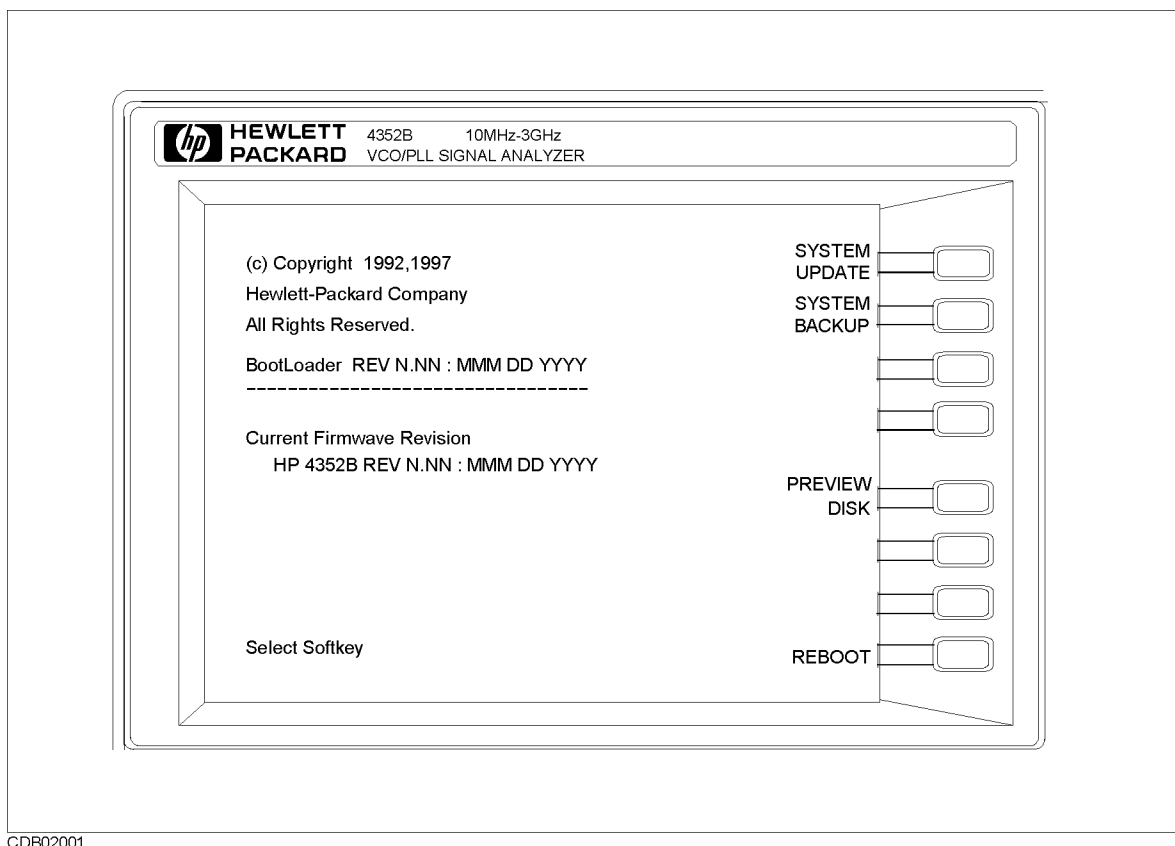

**Figure 2-1. Bootloader Menu Screen**

2. Insert the furnished flexible disk into the disk drive.
3. Press **PREVIEW DISK**. The update disk revision will be displayed.

4. Confirm the displayed “Update Disk Revision” is 02.00 and press **Return**.
5. Press **SYSTEM UPDATE**, **CONTINUE** to install the 4352B firmware from the flexible disk to the 4352B flash memory. It will take about a few minutes.
6. After “Update Complete” is displayed, press **REBOOT** to reboot the 4352B.
7. Press **System**, **FIRMWARE REVISION** to confirm the current firmware revision. If “POWER ON TEST FAILED” isn’t displayed on the LCD and the new firmware revision is correctly displayed, the firmware installation is successfully completed.
8. Put the firmware revision label on the 4352B’s rear panel as shown in Figure 2-2.

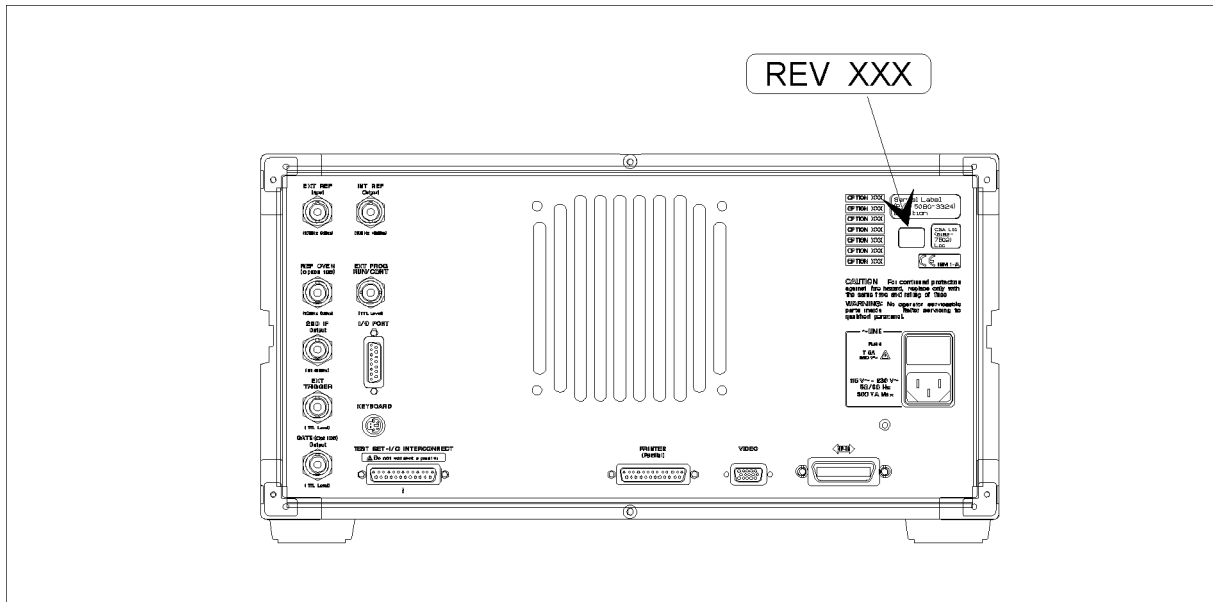

CDB02002

**Figure 2-2. Location of the Firmware Revision Label**

**Note**



The Firmware Installation Kit can be used to install the firmware into more than one unit of the 4352B. In this case, order additional firmware revision labels (Agilent P/N: 5080-3950).