

THANK YOU

N469xD Electronic Calibration Module


Congratulations, with this ECal module you will achieve fast, accurate results with confidence.

CAUTION

Please use ESD precautions when handling and operating.

- 1 Prepare your required test port cables for the instrument to be calibrated.
- 2 Connect the included USB cable to the ECal module and the other end of the cable to a USB port on the analyzer.
- 3 Once the Status LED turns green, launch the instrument's calibration wizard and follow the instructions.

To instrument USB

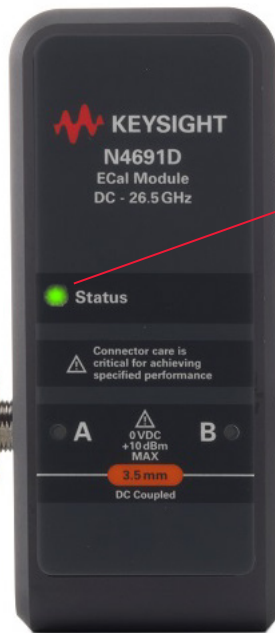

Indicator light

To instrument Port



To instrument Port



keysight.com

Find a Manual · Register Your ECal
Browse Application Notes
Request Repair or Calibration
View Discussion Forums · Updates



N469xD Ref Guide N7550-90002

www.keysight.com/find/ecal





This information is subject to change without notice.

© Keysight Technologies 2012-2018

Edition 1, March 2018



N4690-90002

www.keysight.com