


# Keysight Technologies

## Fundamentals of RF and Microwave Power Measurements (Part 3)

Application Note

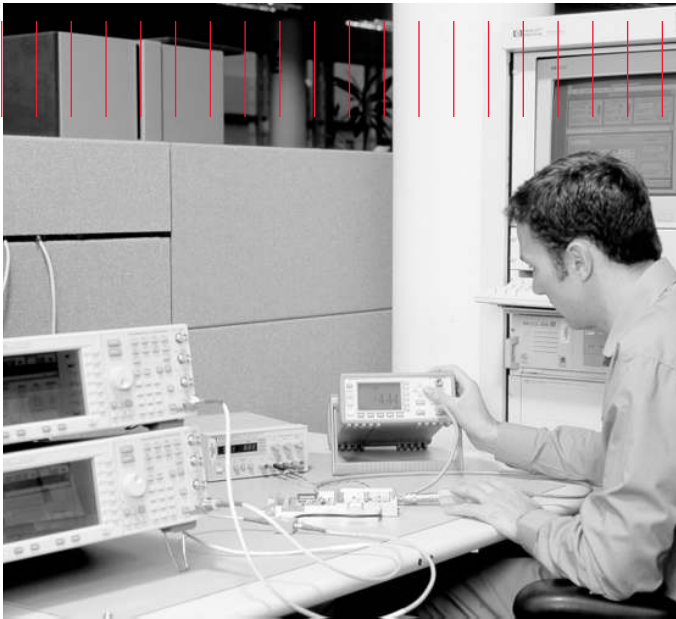

For user convenience, the Keysight *Fundamentals of RF and Microwave Power Measurements*, application note 64-1, literature number 5965-6330E, has been updated and segmented into four technical subject groupings. The following abstracts explain how the total field of power measurement fundamentals is now presented.

## Fundamentals of RF and Microwave Power Measurements (Part 1)

### Introduction to Power, History, Definitions, International Standards, and Traceability

AN 1449-1, literature number 5988-9213EN

Part 1 introduces the historical basis for power measurements, and provides definitions for average, peak, and complex modulations. This application note overviews various sensor technologies needed for the diversity of test signals. It describes the hierarchy of international power traceability, yielding comparison to national standards at worldwide National Measurement Institutes (NMIs) like the U.S. National Institute of Standards and Technology. Finally, the theory and practice of power sensor comparison procedures are examined with regard to transferring calibration factors and uncertainties. A glossary is included which serves all four parts.

## Fundamentals of RF and Microwave Power Measurements (Part 2)

### Power Sensors and Instrumentation

AN 1449-2, literature number 5988-9214EN

Part 2 presents all the viable sensor technologies required to exploit the users' wide range of unknown modulations and signals under test. It explains the sensor technologies, and how they came to be to meet certain measurement needs. Sensor choices range from the venerable thermistor to the innovative thermocouple to more recent improvements in diode sensors. In particular, clever variations of diode combinations are presented, which achieve ultra-wide dynamic range and square-law detection for complex modulations. New instrumentation technologies, which are underpinned with powerful computational processors, achieve new data performance.

## Fundamentals of RF and Microwave Power Measurements (Part 3)

### Power Measurement Uncertainty per International Guides

AN 1449-3, literature number 5988-9215EN

Part 3 discusses the all-important theory and practice of expressing measurement uncertainty, mismatch considerations, signal flowgraphs, ISO 17025, and examples of typical calculations. Considerable detail is shown on the ISO 17025, Guide for the Expression of Measurement Uncertainties, has become the international standard for determining operating specifications. Keysight has transitioned from ANSI/NCSL Z540-1-1994 to ISO 17025.

## Fundamentals of RF and Microwave Power Measurements (Part 4)

### An Overview of Keysight Instrumentation for RF/Microwave Power Measurements

AN 1449-4, literature number 5988-9216EN

Part 4 overviews various instrumentation for measuring RF and microwave power, including spectrum analyzers, microwave receivers, network analyzers, and the most accurate method, power sensors/meters. It begins with the unknown signal, of arbitrary modulation format, and draws application-oriented comparisons for selection of the best instrumentation technology and products.

Most of the note is devoted to the most accurate method, power meters and sensors. It includes comprehensive selection guides, frequency coverages, contrasting accuracy and dynamic performance to pulsed and complex digital modulations. These are especially crucial now with the advances in wireless communications formats and their statistical measurement needs.

# Table of Contents

I. Introduction.....	4
II. Power Transfer, Signal Flowgraphs .....	5
Power transfer, generators and loads .....	5
RF circuit descriptions.....	5
Reflection coefficient.....	7
Signal flowgraph visualization .....	8
III. Measurement Uncertainties .....	12
Mismatch loss uncertainty.....	12
Mismatch loss and mismatch gain.....	13
Simple techniques to reduce mismatch loss uncertainty .....	13
Advanced techniques to improve mismatch uncertainty .....	17
Eliminating mismatch uncertainty by measuring source and load complex reflection coefficients and computer correcting .....	18
Other sensor uncertainties.....	18
Calibration factor .....	19
Power meter instrumentation uncertainties .....	20
IV. Alternative Methods of Combining Power Measurement Uncertainties.....	23
Calculating total uncertainty.....	23
Power measurement equation.....	23
Worst-case uncertainty method .....	25
RSS uncertainty method .....	26
A new international guide to the expression of uncertainty in measurement (ISO GUM) .....	27
Power measurement model for ISO process .....	29
Standard uncertainty of mismatch model .....	31
Example of calculation of uncertainty using ISO model.....	32
Example of calculation of uncertainty of USB sensor using ISO model.....	35

# I. Introduction

The purpose of the new series of Fundamentals of RF and Microwave Power Measurements application notes, which were leveraged from former note 64-1, is to

- 1) Retain tutorial information about historical and fundamental considerations of RF/microwave power measurements and technology which tend to remain timeless.
- 2) Provide current information on new meter and sensor technology.
- 3) Present the latest modern power measurement techniques and test equipment that represents the current state-of-the-art.

Part 3 of this series, *Power Measurement Uncertainty per International Guides*, is a comprehensive overview of all the contributing factors (there are 12 described in the International Standards Organization (ISO) example) to power measurement uncertainty of sensors and instruments. It presents signal flowgraph principles and a characterization of the many contributors to the total measurement uncertainty.

Chapter 2 examines the concept of signal flow, the power transfer between generators and loads. It defines the complex impedance, its effect on signal reflection and standing waves, and in turn its effect on uncertainty of the power in the sensor. It introduces signal flowgraphs for better visualizations of signal flow and reflection.

Chapter 3 breaks down all the various factors that influence measurement uncertainty. It examines the importance of each and how to minimize each of the various factors. Most importantly, considerable space is devoted to the largest component of uncertainty, mismatch uncertainty. It presents many practical tips for minimizing mismatch effects in typical instrumentation setups.

Chapter 4 begins by presenting two traditional methods of combining the effect of the multiple uncertainties. These are the "worst-case" method and the "RSS" method. It then examines in detail the increasingly popular method of combining uncertainties, based on the *ISO Guide to the Expression of Uncertainty in Measurement*, often referred to as the GUM<sup>1</sup>. ISO is the International Standards Organization, an operating unit of the International Electrotechnical Commission (IEC). The reason the GUM is becoming more crucial is that the international standardizing bodies have worked to develop a global consensus among National Measurement Institutes (such as NIST) and major instrumentation suppliers as well as the user community to use the same uncertainty standards worldwide.

**Note:** In this application note, numerous technical references will be made to the other published parts of the series. For brevity, we will use the format *Fundamentals Part X*. This should insure that you can quickly locate the concept in the other publication. Brief abstracts for the four-part series are provided on the inside front cover.

[1] "ISO Guide to the Expression of Uncertainty in Measurement," International Organization for Standardization, Geneva, Switzerland, ISBN 92-67-10188-9, 1995.

## II. Power Transfer, Signal Flowgraphs

### Power transfer, generators and loads

The goal of an absolute power measurement is to characterize the unknown power output from some source (for example a generator, transmitter, or oscillator). Sometimes the generator is an actual signal generator or oscillator where the power sensor can be attached directly to that generator. On other occasions, however, the generator is actually an equivalent generator. For example, if the power source is separated from the measurement point by such components as transmission lines, directional couplers, amplifiers, mixers, etc., then all those components may be considered as parts of the generator. The port that the power sensor connects to, would be considered the output port of the equivalent generator.

To analyze the effects of impedance mismatch, this chapter explains mathematical models that describe loads, including power sensors and generators, which apply to the RF and microwave frequency ranges. The microwave descriptions begin by relating back to the equivalent low-frequency concepts for those familiar with those frequencies. Signal flowgraph concepts aid in analyzing power flow between an arbitrary generator and load. From that analysis, the terms mismatch loss and mismatch loss uncertainty are defined.

### RF circuit descriptions

At low frequencies, methods for describing a generator include the Thevenin and Norton equivalent circuits. The Thevenin equivalent circuit of a generator, for example, has a voltage generator,  $e_s$ , in series with an impedance,  $Z_g$ , as shown in Figure 2-1. For a generator, even if composed of many components,  $e_s$  is defined as the voltage across the output port when the load is an open circuit.  $Z_g$  is defined as the impedance seen looking back into the generator when all the sources inside the generator are reduced to zero.

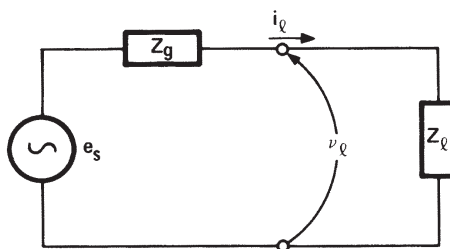


Figure 2-1. A Thevenin equivalent generator connected to an arbitrary load.

The power delivered by a generator to a load is a function of the load impedance. If the load is a perfect open or short circuit, the power delivered is zero. Analysis of Figure 2-1 would show that the power delivered to the load is a maximum when load impedance,  $Z_\ell$ , is the complex conjugate of the generator impedance,  $Z_g$ . This power level is called the "power available from a generator," or "maximum available power," or "available power." When  $Z_\ell = (R_\ell + jX_\ell)$  and  $Z_g = (R_g + jX_g)$  are complex conjugates of each other, their resistive parts are equal and their imaginary parts are identical in magnitude but of opposite sign; thus  $R_\ell = R_g$  and  $X_\ell = -X_g$ . Complex conjugate is written with an \* so that  $Z_\ell = Z_g^*$  is the required relationship for maximum power transfer.

The Thevenin equivalent circuit is not very useful at microwave frequencies for a number of reasons. First, the open circuit voltage is difficult to measure because of fringing capacitance and the loading effect of a voltmeter probe. Further, the concept of voltage loses usefulness at microwave frequencies where it is desired to define the voltage between two points along a transmission path, separated by a significant fraction of a wavelength. If there is a "standing wave" along a transmission line, the voltage varies along the line. Also, there are problems with discussing voltage in rectangular waveguide. As a result, the concept of power is much more frequently used than voltage for characterizing generators at RF and microwave frequencies.

The open circuit that defines the Thevenin equivalent voltage generator is useless for measuring power because the power dissipated in an open termination is always zero. The reference impedance used for characterizing RF generators is almost always 50  $\Omega$ . The reason for this is that 50  $\Omega$  is easy to realize over the entire frequency range of interest with a transmission line of 50  $\Omega$  characteristic impedance and with a reflection-less termination.

The standard symbol for characteristic impedance,  $Z_0$ , is also the standard symbol for reference impedance. In some cases, for example, where 75  $\Omega$  transmission lines are used in systems with a 50  $\Omega$  reference impedance, another symbol, such as  $Z_r$ , should be used for reference impedance.  $Z_0$  will be used in this application note to mean reference impedance. A generator is characterized, therefore, by the power it delivers to a reference load  $Z_0 = 50 \Omega$ . In general, that power is not equal to the maximum available power from the generator; they are equal only if  $Z_g = Z_0$ .

As frequencies exceed 300 MHz, the concept of impedance loses usefulness and is replaced by the concept of reflection coefficient. The impedance seen looking down a transmission line toward a mismatched load, varies continuously with the position along the line. The magnitude and the phase of impedance are functions of line position. Reflection coefficient is well-behaved; it has a magnitude that is constant and a phase angle that varies linearly with distance from the load.

## Reflection coefficient

At microwave frequencies where power typically is delivered to a load by a transmission line that is many wavelengths long, it is very convenient to replace the impedance description of the load, involving voltage and current and their ratio (Ohm's law), with a reflection coefficient description involving incident and reflected traveling waves, and their ratio. To characterize a passive load, Ohm's law is replaced by:

$$\frac{b_\ell}{a_\ell} = \Gamma_\ell \quad (\text{Equation 2-1})$$

where  $a_\ell$  is proportional to the voltage of the incident wave,  $b_\ell$  is proportional to the voltage of the reflected wave, and  $\Gamma_\ell$  is defined to be the reflection coefficient of the load. All three quantities are, in general, complex numbers and change with frequency. The quantities  $a_\ell$  and  $b_\ell$  are normalized<sup>1</sup> in such a way that the following equations hold:

$$|a_\ell|^2 = P_i \quad (\text{Equation 2-2})$$

$$|b_\ell|^2 = P_r \quad (\text{Equation 2-3})$$

where  $P_i$  is power incident on the load and  $P_r$  is power reflected by it. The net power dissipated by the load,  $P_d$ , is given by:

$$P_d = P_i - P_r = |a_\ell|^2 - |b_\ell|^2 \quad (\text{Equation 2-4})$$

This power is the total power obtained from the source; it includes not only power converted to heat, but also power radiated to space and power that leaks through accessory cables to other pieces of equipment.

Transmission line theory relates the reflection coefficient,  $\Gamma_\ell$  of a load to its impedance,  $Z_\ell$ , as follows:

$$\Gamma_\ell = \frac{Z_\ell - Z_0}{Z_\ell + Z_0} \quad (\text{Equation 2-5})$$

where  $Z_0$  is the characteristic impedance of the system. Further, the load voltage,  $v_\ell$ , and load current,  $i_\ell$ , are given by:

$$\begin{aligned} V_\ell &= \text{Incident voltage} + \text{reflected voltage} \\ &= \sqrt{Z_0} (a_\ell + b_\ell) \end{aligned} \quad (\text{Equation 2-6})$$

$$\begin{aligned} i_\ell &= \text{Incident current} - \text{reflected current} \\ &= \frac{1}{\sqrt{Z_0}} (a_\ell - b_\ell) \end{aligned} \quad (\text{Equation 2-7})$$

since current in a traveling wave is obtained from the voltage by dividing by  $Z_0$ . Solving for  $a_\ell$  and  $b_\ell$  results in:

$$a_\ell = \frac{1}{2\sqrt{Z_0}} (v_\ell + Z_0 i_\ell) \quad (\text{Equation 2-8})$$

$$b_\ell = \frac{1}{2\sqrt{Z_0}} (v_\ell - Z_0 i_\ell) \quad (\text{Equation 2-9})$$

1. If the transmission line characteristic impedance is  $Z_0$  the normalization factor is  $\sqrt{Z_0}$ ; that is,  $a_\ell$  is obtained from the voltage of the incident wave by dividing by  $\sqrt{Z_0}$ . Similarly,  $b_\ell$  is obtained from the voltage of the reflected wave by dividing by  $\sqrt{Z_0}$ .

These equations are used in much of the literature to define  $a_\ell$  and  $b_\ell$  (see the reference by Kurakawa.)[1] The aim here, however, is to introduce  $a_\ell$  and  $b_\ell$  more intuitively. Although equations 2-8 and 2-9 appear complicated, the relationships to power (equations 2-2, 2-3, and 2-4) are very simple. The Superposition Theorem, used extensively for network analysis, applies to  $a_\ell$  and  $b_\ell$ ; the Superposition Theorem does not apply to power.

Reflection coefficient,  $\Gamma_\ell$ , is frequently expressed in terms of its magnitude,  $\rho_\ell$ , and phase,  $\phi_\ell$ . Thus  $\rho_\ell$  gives the magnitude of  $b_\ell$  with respect to  $a_\ell$  and  $\phi_\ell$  gives the phase of  $b_\ell$  with respect to  $a_\ell$ .

The most common methods of measuring reflection coefficient involve observing  $a_\ell$  and  $b_\ell$  separately and then taking the ratio. Sometimes it is difficult to observe  $a_\ell$  and  $b_\ell$  separately, but it is possible to observe the interference pattern of the counter-travelling waves formed by  $a$  and  $b$  on a transmission line. This pattern is called the standing wave pattern. The interference pattern has regions of maximum and of minimum signal strength. The maximums are formed by constructive interference between  $a_\ell$  and  $b_\ell$  and have amplitude  $|a_\ell| + |b_\ell|$ . The minimums are formed by destructive interference and have amplitude  $|a_\ell| - |b_\ell|$ . The ratio of the maximum to the minimum is called the standing-wave ratio (SWR, sometimes referred to as voltage-standing-wave-ratio, VSWR).<sup>1</sup> It can be measured with a slotted line and moveable probe, or more commonly with network analyzers. SWR is related to the magnitude of reflection coefficient  $\rho_\ell$  by:

$$\text{SWR} = \frac{|a_\ell| + |b_\ell|}{|a_\ell| - |b_\ell|} = \frac{1 + |b_\ell/a_\ell|}{1 - |b_\ell/a_\ell|} = \frac{1 + \rho_\ell}{1 - \rho_\ell} \quad (\text{Equation 2-10})$$

### Signal flowgraph visualization

A popular method of visualizing the flow of power through a component or among various components is by means of a flow diagram called a signal flowgraph.[1,2] This method of signal flow analysis was popularized in the mid-1960's, at the time that network analyzers were introduced, as a means of describing wave travel in networks.

The signal flowgraph for a load (Figure 2-2) has two nodes, one to represent the incident wave,  $a_\ell$ , and the other to represent the reflected wave,  $b_\ell$ . They are connected by branch  $\Gamma_\ell$ , which shows how  $a_\ell$  gets changed to become  $b_\ell$ .

Just as the Thevenin equivalent had two quantities for characterizing a generator, generator impedance, and open circuit voltage, the microwave equivalent has two quantities for characterizing a microwave or RF generator,  $\Gamma_g$  and  $b_s$ .



Figure 2-2. Signal flowgraph for a load.

1. Traditionally VSWR and PSWR referred to voltage and power standing wave ratio. Since PSWR has fallen to dis-use, VSWR is shortened to SWR.



The equation for a generator is (see Figure 2-3):

$$b_g = b_s + \Gamma_g a_g \quad (\text{Equation 2-11})$$

where:

$b_g$  is the wave emerging from the generator

$a_g$  is the wave incident upon the generator from other components

$\Gamma_g$  is the reflection coefficient looking back into the generator

$b_s$  is the internally generated wave

$\Gamma_g$  is related to  $Z_g$  by:

$$\Gamma_g = \frac{Z_g - Z_0}{Z_g + Z_0} \quad (\text{Equation 2-12})$$

which is very similar to Equation 2-5. The  $b_s$  is related to the power to a reference load from the generator,  $P_{g_{Z_0}}$ , by:

$$P_{g_{Z_0}} = |b_s|^2 \quad (\text{Equation 2-13})$$

$b_s$  is related to the Thevenin voltage,  $e_s$ , by:

$$b_s = \frac{e_s \sqrt{Z_0}}{Z_0 + Z_g} \quad (\text{Equation 2-14})$$

The signal flowgraph of a generator has two nodes representing the incident, wave  $a_g$  and reflected wave  $b_g$ . The generator also has an internal node,  $b_s$ , that represents the ability of the generator to produce power. It contributes to output wave,  $b_g$ , by means of a branch of value one. The other component of  $b_g$  is that portion of the incident wave,  $a_g$ , that is reflected off the generator.

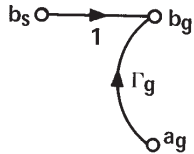


Figure 2-3. Signal flowgraph of a microwave generator.

Now that equivalent circuits for a load and generator have been covered, the flow of power from the generator to the load may be analyzed. When the load is connected to the generator, the emerging wave from the generator becomes the incident wave to the load and the reflected wave from the load becomes the incident wave to the generator. The complete signal flowgraph (Figure 2-4) shows the identity of those waves by connecting node  $b_g$  to  $a_\ell$  and node  $b_\ell$  to  $a_g$  with branches of value one.

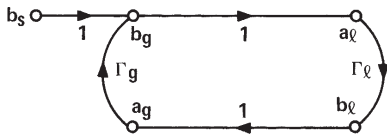


Figure 2-4. The complete signal flowgraph of a generator connected to a load.

Figure 2-4 shows the effect of mismatch or reflection. First, power from the generator is reflected by the load. That reflected power is re-reflected from the generator and combines with the power then being created by the generator, generating a new incident wave. The new incident wave reflects and the process continues on and on. It does converge, however, to the same result that will now be found by algebra.

The equation of the load (2-1) is rewritten with the identity of  $a_g$  to  $b_\ell$  added as:

$$b_\ell = \Gamma_\ell a_\ell = a_g \quad (\text{Equation 2-15})$$

The equation of the generator (2-11) is also rewritten with the identity of  $a_\ell$  to  $b_g$  added as:

$$b_g = b_s + \Gamma_g a_g = a_\ell \quad (\text{Equation 2-16})$$

Equations 2-15 and 2-16 may be solved for  $a_\ell$  and  $b_\ell$  in terms of  $b_s$ ,  $\Gamma_\ell$  and  $\Gamma_g$ :

$$a_\ell = \frac{b_s}{1 - \Gamma_g \Gamma_\ell} \quad (\text{Equation 2-17})$$

$$b_\ell = \frac{b_s \Gamma_\ell}{1 - \Gamma_g \Gamma_\ell} \quad (\text{Equation 2-18})$$

From these solutions the load's incident and reflected power can be calculated:

$$P_i = |a_\ell|^2 = |b_s|^2 \frac{1}{|1 - \Gamma_g \Gamma_\ell|^2} \quad (\text{Equation 2-19})$$

$$P_r = |b_\ell|^2 = |b_s|^2 \frac{\Gamma_\ell^2}{|1 - \Gamma_g \Gamma_\ell|^2} \quad (\text{Equation 2-20})$$

Equation 2-19 yields the somewhat surprising fact that power flowing toward the load depends on the load characteristics.

The power dissipated,  $P_d$ , is equal to the net power delivered by the generator to the load,  $P_{g\ell}$ :

$$P_d = P_{g\ell} = P_i - P_r = |b_s|^2 \frac{1 - |\Gamma_\ell|^2}{|1 - \Gamma_g \Gamma_\ell|^2} \quad (\text{Equation 2-21})$$

Two particular cases of Equation 2-21 are of interest. First, if  $\Gamma_\ell$  were zero, that is if the load impedance were  $Z_o$ , Equation 2-21 would give the power delivered by the generator to a  $Z_o$  load:

$$P_{g\ell}|_{Z_\ell = Z_o} = P_{gZ_o} = |b_s|^2 \quad (\text{Equation 2-22})$$

This case is used to define  $b_s$  as the generated wave of the source.

The second case of interest occurs when:

$$\Gamma_g = \Gamma_\ell^* \quad (\text{Equation 2-23})$$

Where \* indicates the complex conjugate. Interpreting Equation 2-23 means that the reflection coefficient looking toward the load from the generator is the complex conjugate of the reflection coefficient looking back toward the generator. It is also true that the impedances looking in the two directions are complex conjugates of each other. The generator is said to be "conjugately matched." If  $\Gamma_\ell$  is somehow adjusted so that Equation 2-23 holds, the generator puts out its "maximum available power,"  $P_{av}$ , which can be expressed as:

$$P_{av} = \frac{|b_s|^2}{1 - |\Gamma_g|^2} \quad (\text{Equation 2-24})$$

Comparing Equations 2-22 and 2-24 shows that  $P_{av} \geq P_{gZ_o}$ .

Unfortunately, the term "match" is popularly used to describe both conditions,  $Z_\ell = Z_o$  and  $Z_\ell = Z_g^*$ . The use of the single word "match" should be dropped in favor of " $Z_o$  match" to describe a load of zero reflection coefficient, and in favor of "conjugate match" to describe the load that provides maximum power transfer.

Now the differences can be plainly seen. When a power sensor is attached to a generator, the measured power that results is  $P_{g_{z_0}}$  of Equation 2-21, but the proper power for characterizing the generator is  $P_{g_{z_0}}$  of Equation 2-22. The ratio of equations 2-22 to 2-21 is:

$$\frac{P_{g_{z_0}}}{P_{g_\ell}} = \frac{|1 - \Gamma_g \Gamma_\ell|^2}{1 - |\Gamma_\ell|^2} \quad (\text{Equation 2-25})$$

or, in dB:

$$\begin{aligned} \text{dB} &= 10 \log \frac{P_{g_{z_0}}}{P_{g_\ell}} \\ &= 10 \log |1 - \Gamma_g \Gamma_\ell|^2 - 10 \log (1 - |\Gamma_\ell|^2) \end{aligned} \quad (\text{Equation 2-26})$$

This ratio (in dB) is called the " $Z_0$  mismatch loss." It is quite possible that Equation 2-25 could yield a number less than one. Then Equation 2-26 would yield a negative number of dB.

In that case more power would be transferred to the particular load being used than to a  $Z_0$  load, where the  $Z_0$  mismatch loss is actually a gain. An example of such a case occurs when the load and generator are conjugately matched.

A similar difference exists for the case of conjugate match; the measurement of  $P_{g_\ell}$  from Equation 2-21 differs from  $P_{av}$  of Equation 2-24. The ratio of those equations is:

$$\frac{P_{av}}{P_{g_\ell}} = \frac{|1 - \Gamma_g \Gamma_\ell|^2}{(1 - |\Gamma_g|^2)(1 - |\Gamma_\ell|^2)} \quad (\text{Equation 2-27})$$

or, in dB:

$$\begin{aligned} \text{dB} &= 10 \log \frac{P_{av}}{P_{g_\ell}} \\ &= 10 \log |1 - \Gamma_\ell \Gamma_g|^2 - 10 \log (1 - |\Gamma_g|^2) - 10 \log (1 - |\Gamma_\ell|^2) \end{aligned} \quad (\text{Equation 2-28})$$

This ratio in dB is called the "conjugate mismatch loss."

If  $\Gamma_\ell$  and  $\Gamma_g$  were completely known, or easily measured versus frequency, the power corrections would be simplified. The power meter reading of  $P_{g_\ell}$  would be combined with the proper values of  $\Gamma_\ell$  and  $\Gamma_g$  in Equations 2-25 or 2-27 to calculate  $P_{g_{z_0}}$  or  $P_{av}$ . The mismatch would be corrected and there would be no uncertainty. Yet in the real world, most power measurements are made without the  $\Gamma_\ell$  and  $\Gamma_g$  corrections in the interest of time. For certain special procedures, such as power sensor calibrations, where utmost accuracy is required, the time is taken to characterize the generator and load (sensor) complex reflection coefficients versus frequency, and corrections made for those effects.

[1] K. Kurakawa, "Power Waves and the Scattering Matrix," IEEE Trans. on Microwave Theory and Techniques, Vol. 13, No. 2, Mar 1965.

[2] N.J. Kuhn, "Simplified Signal Flow Graph Analysis," Microwave Journal, Vol 6, No 10, Nov. 1963.

### III. Measurement Uncertainties

This chapter examines most of the power measurement uncertainty factors in detail. One example enumerates 12 different factors, some dominant and some almost trivial. Because the mismatch term almost always predominates, it will receive extra attention, especially in simple procedures for reducing and minimizing its effect.

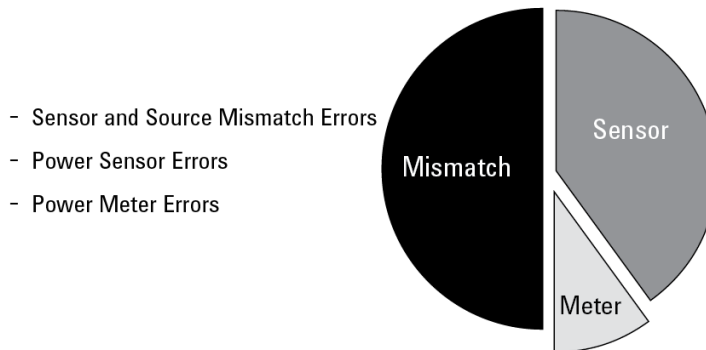


Figure 3-1. This chart shows a typical distribution of uncertainty values for its three largest causes: mismatch, sensor and meter specifications. It reveals why low SWR specifications for the power sensor and source is so crucial.

#### Mismatch loss uncertainty

$\Gamma_\ell$  and  $\Gamma_g$  are seldom completely known for both magnitude and phase. Only the magnitudes  $\rho_\ell$  and  $\rho_g$  are usually measured or specified. In these cases, the first term of the right side of Equations 2-26 and 2-27 cannot be exactly calculated because of the lack of phase information, but the maximum and minimum values can be found. The maximum and minimum values of  $10 \log |1 - \Gamma_g \Gamma_\ell|^2$  are called "mismatch loss uncertainty limits" and are given the symbol  $M_u$ . The maximum occurs when  $\Gamma_g \Gamma_\ell$  combines with "one" in phase to yield:

$$M_{u \max} = 10 \log (1 + \rho_g \rho_\ell)^2 \quad (\text{Equation 3-1})$$

This maximum limit will always be a positive number but it cannot be larger than 6 dB (this occurs when  $\rho_\ell = \rho_g = 1$ ). The minimum value of the mismatch loss uncertainty occurs when  $\Gamma_g \Gamma_\ell$  combines with "one" exactly out of phase to yield:

$$M_{u \min} = 10 \log (1 - \rho_g \rho_\ell)^2 \quad (\text{Equation 3-2})$$

The minimum limit will always be a negative number. It is also true that the magnitude of the minimum limit will be greater than the magnitude of the maximum limit, but usually by a very small amount.

Sometimes the mismatch loss uncertainty limits are given in percent deviation from "one" rather than in dB. In this case:

$$\%M_u = 100 [(1 \pm \rho_g \rho_\ell)^2 - 1] \quad (\text{Equation 3-3})$$

Mismatch loss uncertainty limits can be calculated by substituting the values of  $\rho_\ell$  and  $\rho_g$  into Equations 3-1, 3-2, and 3-3. For mismatches less than 2 percent, this approximation can be used;  $M_u > \pm 200 \rho_g \rho_\ell \%$ .

Modern engineering electronic calculators have a series of programs available especially suited for electrical engineering problems. One of the programs is intended for calculating mismatch loss uncertainty limits, either in terms of SWR or of  $\rho$ . Computer-aided engineering models often contain routines for such transmission line calculations.

## Mismatch loss and mismatch gain

Traditionally, the transmission power loss due to signal reflection was termed mismatch loss. This was done in spite of the fact that occasionally the two reflection coefficient terms would align in a phase that produced a small "gain." More recent usage finds the term mismatch gain more popular because it is a more inclusive term and can mean either gain (positive number) or loss (negative number). Similarly, it is more difficult to think of a negative mismatch loss as a gain. In this note, we use the terms interchangeably, with due consideration to the algebraic sign.

The second term on the right side of Equation 2-26,  $-10 \log(1 - |\Gamma_\ell|^2)$ , is called mismatch loss. It accounts for the power reflected from the load. In power measurements, mismatch loss is usually taken into account when correcting for the calibration factor of the sensor, to be covered below.

The conjugate mismatch loss of Equation 2-28 can be calculated, if needed. The uncertainty term is the same as the  $Z_0$  mismatch loss uncertainty term and the remaining terms are mismatch loss terms, one at the generator and one at the load. The term conjugate mismatch loss is not used much anymore. It was used when reflections were tuned out by adjusting for maximum power (corresponding to conjugate match). Now the various mismatch errors have been reduced to the point where the tedious tuning at each frequency is not worth the effort. In fact, modern techniques without tuning might possibly be more accurate because the tuners used to introduce their own errors that could not always be accounted for accurately.

Mismatch in power measurements generally causes the indicated power to be different from that absorbed by a reflection-less power sensor. The reflection from the power sensor is partially accounted for by the calibration factor of the sensor which is considered in the next chapter. The interaction of the sensor with the generator (the re-reflected waves) could be corrected only by knowledge of phase and amplitude of both reflection coefficients,  $\Gamma_\ell$  and  $\Gamma_g$ . If only the standing wave ratios or reflection coefficient magnitudes  $\rho_\ell$  and  $\rho_g$  are known, then only the mismatch uncertainty limits can be calculated. The mismatch uncertainty is combined with all the other uncertainty terms later where an example for a typical measurement system is analyzed.

## Simple techniques to reduce mismatch loss uncertainty [1]

Before embarking on some practical tips for controlling mismatch uncertainties, Figure 3-2 shows a graphical perspective for the mismatch uncertainty that occurs when a signal passes between two different reflection coefficients. The power equations can easily compute the exact uncertainties based on the magnitude of  $\Gamma(\rho)$ . One of the unknown reflection coefficients is plotted on the horizontal and the other on the vertical axis. For example, if the source and load both had a  $\rho$  of 0.1, the approximate mismatch uncertainty would be approximately 0.09 dB.

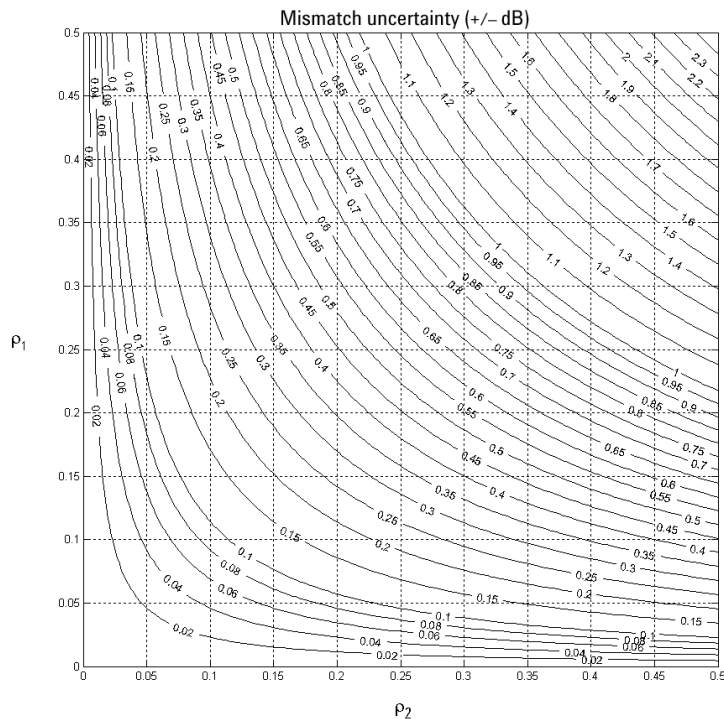


Figure 3-2. A profile of mismatch uncertainty (dB) values resulting from two reflection coefficients.

One important conclusion to draw from this chart is that if one of the reflection coefficients ( $\rho_1$ ) is less than, for example 0.05 (SWR is about 1.1), you can look along the horizontal line and see that even if the  $\rho_2$  reflection coefficient goes up to 0.5 (SWR = 3.0), the mismatch uncertainty only increases to about 0.2 dB. This gives us a strong hint that choosing a power sensor with the lowest SWR specification is recommended.

Controlling mismatch uncertainty is as simple as reducing the reflection coefficient on any transmission lines or components that are part of the test arrangement. Assuming that equipment with the lowest practical SWR has been selected, many other simple measures can be taken to ensure that the performance of the test system does not become degraded.

At lower frequencies, for example less than 300 MHz, minimize the length of the transmission lines to reduce the changes of phase with frequency. This is not a viable method for higher frequencies, because even short lengths of cable form significant fractions of a wavelength, as shown in Example 1 below.

The use of good quality cables intended for many instrumentation and measurement applications is highly recommended. This means that connectors should be designed for hundreds of connection/disconnection cycles. The popular and inexpensive SMA coaxial connector would not be used because it is not designed to endure dozens or hundreds of connections.

This is particularly important for the connection to the unit-under-test (UUT), as this connection may be repeatedly made and broken. Some manufacturers produce cables with specified SWR and loss values at frequencies up to 18 GHz. This is a good indication of the intended purpose of these cables. They should be far more reliable than general-purpose test cables intended for use at lower frequencies.

Semi-rigid cables are preferred if the equipment is fixed in place. However, it is important not to use semi-rigid cables for connections to the UUT where it may often be flexed and will soon become damaged. In this regard, do not go below the minimum bend radius, specified by the cable manufacturer, or it may be permanently damaged.

### Example 1.

#### A 75-Ω cable used between a 50-Ω impedance signal generator and 50-Ω power meter

You pull out an unmarked cable with BNC connectors from a drawer, or borrow one from a colleague. Unknowingly, you connect a 75-Ω cable into your 50-Ω test-system. In that system, Figure 3-3, four components that do not individually vary with frequency, can cause the power dissipated in the load to vary with frequency. Figure 3-4 shows the simulated power dissipated in the load resistor for a 75-Ω transmission line with a 1 ns delay. In practice, this cable would be only 200 mm (8-in) long.

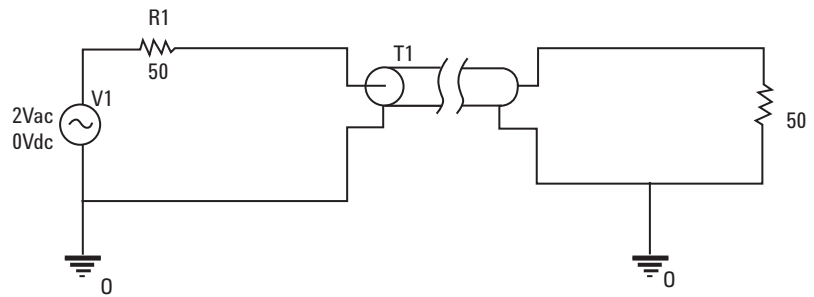


Figure 3-3. 50-Ω signal generator and 50-Ω power sensor connected by a 75-Ω cable.

At Low frequencies, for example below 10 MHz, the system behaves as if the source and load were connected directly together. The load sees half the source voltage. However, as the frequency increases, the power dissipated in the load reduces at first and then increases again in cyclic fashion. When the two-way transit time of the cable is equal to one cycle of the generator frequency, the power cycle begins again. This is at 500 MHz with a 1-ns cable delay. The peak-to-peak variation is about 0.7 dB, and can be calculated from the mismatch uncertainty limits.

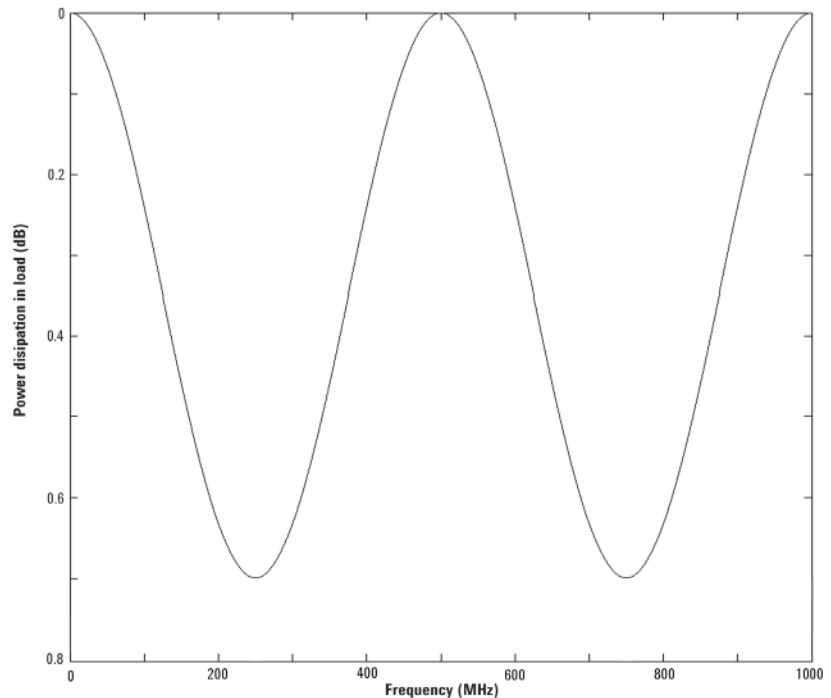


Figure 3-4. Even a short (8-in) length of 75-Ω transmission line connecting two 50-Ω systems causes regular variations of power with frequency, with a peak excursion of 0.7 dB. All this is below 1000 MHz.

**Example 2.**  
**A power meter connected to a signal generator**

Consider measuring the output power of a signal generator, using a power meter at 2.4 GHz. This is the RF frequency for Bluetooth™ and IEEE 802.11b wireless LAN radio systems. Consider further that the Keysight E4433A signal generator, E4418B power meter and 8481A power sensor are chosen for the measurements. The output SWR of the E4433B at 2.4 GHz is 1.9, with an electronically switched attenuator, or 1.35, with a mechanically switched attenuator.

The specified SWR of an 8481A sensor at 2.4 GHz is 1.18, with a reflection coefficient of 0.0826. The 1.9 SWR of the signal generator is equivalent to  $\rho_g = 0.310$ , so the mismatch uncertainty is +0.219, -0.225 dB.

If the mechanical attenuator version of the signal generator is acceptable as a replacement for the electronically switched standard attenuator, the SWR comes down to 1.35, and the reflection coefficient equals 0.149. The mismatch uncertainty now is reduced by half, to +0.106 dB, -0.107 dB. Note that the manufacturer's accuracy specification cannot include mismatch uncertainty because the load SWR is unknown and variable. The electronically switched attenuator is likely to be more reliable in an automatic test system; however, the mechanically switched version shows less mismatch uncertainty and allows a higher maximum output-power level. The measurement application indicates the best choice, but knowledge of the effects of mismatch helps with the analysis.

Connector choice is also important. The connection on the UUT will probably not be under your control, but for the other cables, choose precision threaded connector types like type-N or APC-3.5 in preference to bayonet type, such as BNC, as they provide more repeatable results. When tightening the screw-type connectors, use a torque wrench to avoid over- or under-tightening the connector; then there will be little variation in tightness when another operator takes over.

Using adapters to convert between different families of connectors may be unavoidable, but should be minimized. Adapters should convert directly and should not be stacked. For example, do not convert from type-N to BNC, and then BNC to SMA. Use the proper type-N to SMA adapter. Also, be wary of mating between dissimilar connectors. For example, APC-3.5 and SMA look very similar but have different mechanical interfaces. The use of a precision adapter or "connection saver" is recommended between APC3.5 and SMA connectors.

There are several kinds of type-N connectors, two of which are the 50-Ω and the rarer 75-Ω type (which uses a smaller diameter center conductor). A male, 75-Ω type-N connector connected to a 50-Ω, female type-N connector will often result in an open circuit because the center-mating pin of a 75-Ω connector is smaller in diameter than the 50-Ω version. If a 50-Ω, male type-N connector is inserted into a 75-Ω, type-N female connector then the male connector will cause irreparable damage to the female connector. This is one reason why 75-Ω type-N connectors are rare! BNC connectors also come in 50-Ω and 75-Ω varieties, but usually mixing the two kinds does not cause damage, although premature wear is possible and the SWR will not be as good as it could be.

The best way to check the performance of cables and adapters is to use a vector network analyzer and record the results for comparison at the next regular audit of the test station. The ultimate connectors are sexless, meaning there is only one sex of connector. This means that male-male and female-female adapters are never required. Examples of this kind of connector are APC-7 and the older General Radio 874 connector.



Finally, precision connectors should be regularly cleaned and gauged—measured with a special dial gauge to ensure that they have not been mechanically damaged. A damaged connector can instantly ruin the mated part.

In summary,

- Select test equipment for lowest SWR.
- Keep cable length as short as possible.
- Use good quality cables.
- Select appropriate connectors.
- Keep the connectors clean.
- Measure (gauge) the connectors regularly.
- Replace faulty, worn, or damaged cables and connectors promptly.
- Do not make your own cables for use at high frequencies unless you test them first.
- Minimize the number of adapters.
- If possible, use semi-rigid cables for permanently connected cables.
- Follow the cable manufacturer's recommendation for minimum bend-radius.
- Fix the measurement equipment to the bench if possible (or rack it up).
- Do not over-tighten connectors and do not allow them to become loose—use a torque wrench.
- Do not mate dissimilar families, for example APC-3.5 and SMA.
- Avoid temperature extremes.

### Advanced techniques to improve mismatch uncertainty

When the performance of a test arrangement is simply not good enough for the job, there are a number of techniques that allow an improvement in accuracy. These include adding an attenuator to one end of the transmission line to improve the test SWR. An isolator component can also reduce reflections from a load. Or, as in the case of the power-splitter method of sensor calibration described in *Fundamentals Part 1*, the use of a leveling loop, effectively creates a  $Z_0$  impedance at the centerpoint of the splitter, with the resulting "generator output impedance" being equivalent to the highly-matched microwave resistor in the second arm of the splitter. [2]

The use of an attenuator (pad) to improve the flatness of a transmission line depends on the fact that the return loss of the attenuator is better than the original source or load. The attenuator is usually placed at the end of the line with the worst return loss. Clearly, the generator level will need to be increased to keep the signal-level constant at the load, which may limit the applicability of this method to the mid-range of power levels.

Attenuators are usually broadband devices. In a similar fashion, you can use an isolator to reduce the reflected energy on the line. Isolators are applied at high power levels, where the economic cost of the power lost in an attenuator would be high, and at very low power levels, where the signal would be masked by thermal noise. They are narrow-band devices and are likely to be more expensive than attenuators.

A leveling loop uses low-frequency feedback to improve the effective source match to the line. This requires a two-resistor power splitter or a directional coupler. The output of the generator is measured on a power meter and the generator is adjusted so that the indicated power is at the level you need. This technique depends on having a power meter that is better matched than the signal generator, and an accurately matched two-resistor power-splitter or directional coupler.

As the measurement frequency increases, so does the importance of maintaining a low SWR on the transmission line. You can never completely eliminate mismatch uncertainty, but simple practical measures allow you to keep SWRs to a minimum.

## Eliminating mismatch uncertainty by measuring source and load complex reflection coefficients and computer correcting

As described in Fundamentals Part 1, Chapter 3, most modern sensor calibration systems utilize a method that all but eliminates the mismatch uncertainties between the signal source and the standard sensor or the sensor under test. By characterizing the complex reflection coefficient of both the source and sensor across the frequency range of interest, a software program can then provide signal transfer corrections using the individual phase/amplitude of each reflection coefficient at each frequency of calibration.

In critical power measurement applications, the user could resort to this technique, even though it requires extra test runs to characterize the reflection coefficient of each source and each load. However, it must be recognized that the ordinary power measurements made in production test or R&D labs rely on non-correction procedures. By simply using power sensors with very low SWR, excellent and usually adequate uncertainties can be realized.

## Other sensor uncertainties

After mismatch uncertainty, the second source of error is the imperfect efficiency of the power sensor. There are two parameters that define the design efficiency of a sensor, effective efficiency and calibration factor. Although Keysight now furnishes only calibration factor data with its sensors, since both parameters are still available as measurement services for thermistor sensors from the NIST, they will be reviewed here.

For a power sensor, the power input is the net power delivered to the sensor; it is the incident power minus the reflected power ( $P_i - P_r$ ). However, not all that net input power is dissipated in the sensing element. Some might be radiated outside the transmission system or leaked into the instrumentation, some dissipated in the conducting walls of the structure, or in a capacitor component of the sensor, or a number of other places that are not metered by the instrumentation. The metered power indicates only the power that is dissipated into the power sensing element itself.

For metering, the dissipated high frequency power must go through a conversion process to an equivalent DC or low frequency level. The DC or low frequency equivalent is called  $P_{sub}$ , for substituted power. There are errors associated with the substitution process. In thermistor sensors, for example, errors result from the fact that the spatial distributions of current, power, and resistance within the thermistor element are different for DC and RF power.

To accommodate both the usual parasitic losses as well as the DC or low frequency substitution problem mentioned, a special term, effective efficiency  $\eta_e$ , has been adopted for power sensors. Effective efficiency is defined by:

$$\eta_e = \frac{P_{sub}}{P_{g\ell}} \quad (\text{Equation 3-4})$$

$P_{g\ell}$  is the net power absorbed by the sensor during measurement.  $P_{sub}$  is the substituted low frequency equivalent for the RF power being measured. For thermistor sensors  $P_{sub}$  is the change in bias power required to bring the thermistor back to the same resistance as before the application of RF power. For thermocouple and diode sensors,  $P_{sub}$  is the amount of power from a reference power source, at a specified frequency, when it yields the same voltage to the metering circuits as  $P_{g\ell}$ . The  $\eta_e$  normally changes with frequency, but changes with power level are usually negligible.

Effective efficiency is sometimes measured by the manufacturer when calibrating the sensor and furnished in a calibration chart with the product. Sometimes the data is printed on the label of the sensor, or delineated with dots on a label plot of efficiency. It is expressed in percentage and that factor is entered into the power meter by adjusting the analog dial to the appropriate number or entered digitally into digital power meters.

### Calibration factor

There is another more frequently used term that has been defined for power measurements. It combines effective efficiency and mismatch loss and is called the calibration factor  $K_b$ . The  $K_b$  is defined by:

$$K_b = \frac{P_{sub}}{P_i} \quad (\text{Equation 3-5})$$

Where  $P_i$  is the incident power to the sensor. The accurate measurement of calibration factor  $K_b$  is quite involved and performed mainly by standards laboratories and manufacturers.

The definitions of  $K_b$  and  $\eta_e$  can be combined to yield:

$$K_b = \eta_e \frac{P_{g\ell}}{P_i} = \eta_e (1 - \rho_\ell^2) \quad (\text{Equation 3-6})$$

Where  $\rho_\ell$  is the magnitude of the sensor reflection coefficient. The relationship on the right, which is found by substituting for  $P_i$  and  $P_{g\ell}$  from equations 2-19 and 2-21, shows that  $K_b$  is a combination of effective efficiency and mismatch loss.

Most modern power meters have the ability to correct their meter reading by setting a dial or keying in a digital number to the proper value of  $K_b$ . Then  $P_i$  is actually read off the meter. Values of  $K_b$  for various frequencies are indicated on each Keysight power sensor (except for the E series sensors, which have the data stored on EEPROM). When this feature is used, the indicated or metered power  $P_m$  is (using Equation 2-19):

$$P_m = \frac{P_{g_{z0}}}{K_b} = P_i = \frac{|b_s|^2}{|1 - \Gamma_g \Gamma_\ell|^2} \quad (\text{Equation 3-7})$$

But the desired quantity is usually not  $P_i$  to the sensor but  $P_{g_{z0}}$ , the power that would be dissipated in a  $Z_o$  load. Since  $P_{g_{z0}}$  is by definition  $|b_s|^2$ , the ratio of  $P_{g_{z0}}$  to the meter indication is:

$$\frac{P_{g_{z0}}}{P_m} = |1 - \Gamma_\ell \Gamma_g|^2 \quad (\text{Equation 3-8})$$

The right side of Equation 3-8 is the mismatch uncertainty. Since the use of  $K_b$  corrects for efficiency and mismatch loss, only the mismatch uncertainty remains. It should be pointed out that there is an additional, unavoidable uncertainty associated with  $K_b$ . That uncertainty is due to inaccuracies in the measurement of  $K_b$  by the manufacturer, NIST or standards laboratories and thus the uncertainty of  $K_b$  is specified by the calibration supplier.

### Power meter instrumentation uncertainties (including sensor)

There are a number of uncertainties associated within the electronics of the power meter. The effect of these errors is to create a difference between  $P_m$  and  $P_{\text{sub}}/K_b$ .

#### Reference oscillator uncertainty

Open-loop power measurements, such as those that use thermocouples or semiconductor diode sensors, require a known source of power to verify and adjust for the sensitivity of the sensor. Many power meters, such as the Keysight EPM and EPM-P, have a stable power reference built in. No matter what power reference is used, if it deviates from the expected power output, the calibration adjustment is in error. The uncertainty in the power output from the reference oscillator is specified by the manufacturer. Thermistor power measurements, being closed-loop and having no need for a reference oscillator, are free of this error.

Keysight has recently made improvements in the uncertainty specifications of the 50 MHz reference oscillator in all its power meters. It is now factory set to  $\pm 0.4$  percent and traceable to the National Physical Laboratory of the UK. Expansion of the operating specification includes the following aging characteristics, which are now valid for 2 years:

Accuracy: (for 2 years)

$\pm 0.5\%$  (23  $\pm 3$  °C)

$\pm 0.6\%$  (25  $\pm 10$  °C)

$\pm 0.9\%$  (0 to 55 °C)

Since the reference oscillator represents a reasonably large portion of the ultimate power measurement uncertainty budget, these smaller accuracy numbers in the specification lead to a lower overall measurement uncertainty. Another positive note is that the meters require less downtime in the calibration lab, now having a 2-year calibration cycle.

### Reference oscillator mismatch uncertainty

The reference oscillator has its own reflection coefficient at the operating frequency. This source reflection coefficient, together with that from the power sensor, creates its own mismatch uncertainty. Because the reference oscillator frequency is low, where the reflection coefficients are small, this uncertainty is small (approximately  $\pm 0.01$  dB or  $\pm 0.2$  percent).

### Instrumentation uncertainty

Instrumentation uncertainty is the combination of such factors as meter tracking errors, circuit nonlinearities, range-changing attenuator inaccuracy, and amplifier gain errors. The accumulated uncertainty is guaranteed by the instrument manufacturer to be within a certain limit.

There are other possible sources of uncertainty that are, by nature or design, so small as to be included within the instrumentation uncertainty.

An example of one such error is the thermoelectric voltage that may be introduced by temperature gradients within the electronic circuits and interconnecting cables. Proper design can minimize such effects by avoiding junctions of dissimilar metals at the most sensitive levels. Another example is the small uncertainty which might result from the operator's interpolation of the meter indication.

### Zero set

In any power measurement, the meter must initially be set to zero with no RF power applied to the sensor. Zero setting is usually accomplished within the power meter by introducing an offset voltage that forces the meter to read zero, by either analog or digital means. The offset voltage is contaminated by several sources including sensor and circuit noise. The zero set error is specified by the manufacturer, especially for the most sensitive range. On higher power ranges, error in zero setting is small in comparison to the signal being measured.

### Noise

Noise is also known as short-term stability and it arises from sources within both the power sensor and circuitry. One cause of noise is the random motion of free electrons due to the finite temperature of the components. The power observation might be made at a time when this random fluctuation produces a maximum indication, or perhaps a minimum. Noise is specified as the change in meter indication over a short time interval (usually one minute) for a constant input power, constant temperature, and constant line voltage.

## Drift

This is also called long-term stability and is mostly sensor induced. It is the change in meter indication over a long time (usually one hour) for a constant input power, constant temperature, and constant line voltage. The manufacturer may state a required warm-up interval. In most cases the drift is actually a drift in the zero setting. This means that for measurements on the upper ranges, drift contributes a very small amount to the total uncertainty. On the more sensitive ranges, drift can be reduced to a negligible level by zero setting immediately prior to making a reading.

## Power linearity

Power measurement linearity is mostly a characteristic of the sensor. Deviation from perfect linearity usually occurs in the higher power range of the sensor. For thermocouple sensors, linearity is negligible except for the top power range of +10 to +20 dBm, where the deviation is specified at  $\pm 3$  percent.

For a typical Keysight 8481D Series diode sensor, the upper power range of  $-30$  to  $-20$  dBm exhibits a specified linearity deviation of  $\pm 1$  percent.

With their much wider dynamic power range, the Keysight E Series sensors exhibit somewhat higher deviations from perfect linearity. It is mostly temperature-driven effect and specifications are given for several ranges of temperature. For example, in the  $25 \pm 5$  °C temperature range and the  $-70$  to  $-10$  dBm power range, the typical deviation from linearity is  $\pm 2$  percent RSS.

[1] Lymer, Anthony, "Improving Measurement Accuracy by Controlling Mismatch Uncertainty." TechOnLine, September 2002. website: [www.techonline.com](http://www.techonline.com).

[2] Johnson, Russell A., "Understanding Microwave Power Splitters," Microwave Journal, December 1975.

## IV. Alternative Methods of Combining Power Measurement Uncertainties


### Calculating total uncertainty

In Chapter 3, only the individual uncertainties were discussed; now a total uncertainty must be found. The first descriptions will use the traditional analysis for combining the individual uncertainty factors. These are usually termed the "worst case" and the "RSS (root sum of squares) methods."

Most attention will be devoted to the new international process based on the ISO process, to be described below, since the world's test and measurement communities are converting over to a commonly agreed standard method.

### Power measurement equation

The purpose of this section is to develop an equation that shows how a power meter reading,  $P_m$ , is related to the power a generator would deliver to a  $Z_o$  load,  $P_{g_{z_o}}$  (Figure 4-1). The equation will show how the individual uncertainties

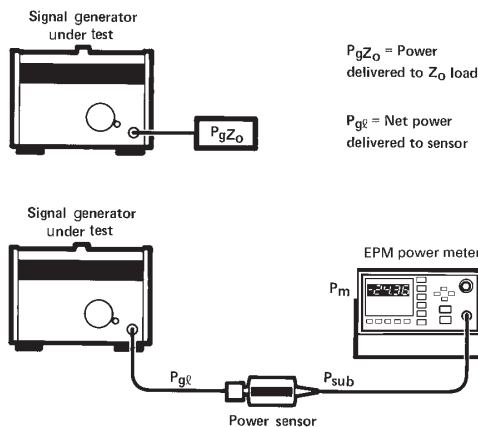

contribute to the difference between  $P_m$  and  $P_{g_{z_o}}$ .

Figure 4-1. Desired power output to be measured is  $P_{g_{z_o}}$ , but measurement results in the reading  $P_m$ .

Starting from the generator in the lower part of Figure 4-1, the first distinction is that the generator dissipates power  $P_{g_\ell}$  in the power sensor instead of  $P_{g_{z_o}}$  because of mismatch effects. That relationship, from Equation 2-25 is:

$$P_{g_{z_o}} = \frac{|1 - \Gamma_\ell \Gamma_g|^2}{1 - |\Gamma_\ell|^2} P_{g_\ell} \quad (\text{Equation 4-1})$$

The next distinction in Figure 4-1 is that the power sensor converts  $P_{g_\ell}$  to the DC or low frequency equivalent,  $P_{sub}$ , for eventual metering. However, this conversion is not perfect due to the fact that effective efficiency,  $\eta_e$ , is less than 100 percent. If  $P_{g_\ell}$  is replaced by  $P_{sub}/\eta_e$  from Equation 3-4, then Equation 4-1 becomes:

$$P_{g_{z_o}} = |1 - \Gamma_\ell \Gamma_g|^2 \frac{1}{\eta_e (1 - \rho_\ell^2)} P_{sub} \quad (\text{Equation 4-2})$$

The first factor on the right is the mismatch uncertainty term,  $M_u$ , discussed previously.  $M_u$  is also referred to as "gain due to mismatch." The denominator of the second factor is the calibration factor  $K_b$  from Equation 3-6. Now Equation 4-2 can be written:

$$P_{g_{z_o}} = M_u \frac{1}{K_b} P_{sub} \quad (\text{Equation 4-3})$$

The last distinguishing feature of Figure 4-1 is that the meter indication  $P_m$ , differs from  $P_{sub}$ . There are many possible sources of error in the power meter electronics that act like improper amplifier gain to the input signal  $P_{sub}$ . These include uncertainty in range changing attenuators and calibration-factor amplifiers, imperfections in the metering circuit and other sources totaled as instrumentation uncertainty. For open-loop power measurements this also includes those uncertainties associated with the calibration of amplifier gain with a power-

reference oscillator. These errors are included in the symbol  $m$  for magnification. There are other uncertainties associated with the electronics that cause deviation between  $P_m$  and  $P_{sub}$ . When  $P_{sub}$  is zero, then  $P_m$  should be zero. Improper zero setting, zero carryover, drift, and noise are likely contributors to  $P_m$  not being zero. The meter reading is offset or translated from  $mP_{sub}$  by a total amount  $t$ . A general linear equation gives  $P_m$  in terms of  $P_{sub}$ :

$$P_m = mP_{sub} + t \quad (\text{Equation 4-4})$$

Substituting Equation 4-4 into Equation 4-3 gives the power measurement equation:

$$P_{gzo} = \frac{M_u (P_m - t)}{K_b m} \quad (\text{Equation 4-5})$$

In the ideal measurement situation,  $M_u$  has the value of one, the  $mK_b$  product is one, and  $t$  is zero. Under ideal conditions, meter reading  $P_m$  gives the proper value of  $P_{gzo}$ .

Table 4-1. Chart of uncertainties for a typical absolute power measurement.

Measurement conditions		Full scale (F.S.) = 100 $\mu$ W		
<b>Pm = 50 <math>\mu</math>W</b> $\rho_\ell \leq 0.091$ (SWR $\leq 1.2$ ) $K_b = 93\% \pm 3\%$ (worst case), $\pm 1.5\%$ (RSS)		$\rho_g \leq 0.2$ (SWRg $\leq 1.5$ )		
Error	Description	Worst case values		RSS component ( $\Delta X/X$ ) <sup>2</sup>
		$P_{gzo}$ max	$P_{gzo}$ min	
<b><math>M_u</math></b>	$(1 \pm P_g P_\ell)^2$	1.0367	0.9639	$(0.0367)^2$
<b><math>K_b</math> uncertainty</b>	$\pm 3\%$ (w.c.), $\pm 1.5\%$ (RSS)	1.03	0.97	$(0.015)^2$
<b>Components of m</b>				
Ref. osc. unc.	$\pm 0.6\%$ (use 2-yr 25 $\pm 10$ $^\circ$ C value)	1.006	0.994	$(0.006)^2$
Ref. osc. $M_u$	SWR <sub>g</sub> = 1.05, SWR <sub>l</sub> = 1.1	1.002	0.998	$(0.002)^2$
Instrumentation	$\pm 0.5\%$ of F.S.	1.01	0.99	$(0.01)^2$
<b>Total m</b>		1.018	0.982	
<b>Components of t</b>				
Zero set	$\pm 0.5\%$ F.S. (low range)	+0.05 $\mu$ W	-0.05 $\mu$ W	$(0.001)^2$
Zero carryover	$\pm 0.2\%$ of F.S.	+0.2 $\mu$ W	-0.2 $\mu$ W	$(0.004)^2$
Noise	$\pm 0.025$ $\mu$ W	+0.025 $\mu$ W	-0.025 $\mu$ W	$(0.0005)^2$
<b>Total t</b>		+0.275 $\mu$ W	-0.275 $\mu$ W	
<b>Expressions of total uncertainty</b>				
$P_{gzo}$ max	Equation 4-8	54.7170 $\mu$ W		
$P_{gzo}$ min	Equation 4-9		45.7111 $\mu$ W	
$\Delta P_{gzo}$		4.7170 $\mu$ W	-4.2889 $\mu$ W	
$\Delta P_{gzo} / P_m$		+9.43%	-8.58%	$(0.001729)$ = $\pm 4.2\%$ +0.1769 dB -0.1844 dB
<b>Uncertainty in dB</b>		0.3915 dB	-0.3895 dB	



## Worst-case uncertainty

One method of combining uncertainties for power measurements in a worst-case manner is to add them linearly. This situation occurs if all the possible sources of error were at their extreme values and in such a direction as to add together constructively, and therefore achieve the maximum possible deviation between  $P_m$  and  $P_{g_{z0}}$ . Table 4-1 is a chart of the various error terms for the power measurement of Figure 4-1. The measurement conditions listed at the top of Table 4-1 are taken as an example. The conditions and uncertainties listed are typical and the calculations are for illustration only. The calculations do not indicate what is possible using the most accurate technique. The description of most of the errors is from a manufacturer's data sheet. Calculations are carried out to four decimal places because of calculation difficulties with several numbers of almost the same size.

Instrumentation uncertainty,  $i$ , is frequently specified in percent of full scale (full scale =  $P_{fs}$ ). The contribution to magnification uncertainty is:

$$m_i = \frac{(1 + i) P_{fs}}{P_m} \quad (\text{Equation 4-6})$$

The several uncertainties that contribute to the total magnification uncertainty,  $m$ , combine like the gain of amplifiers in cascade. The minimum possible value of  $m$  occurs when each of the contributions to  $m$  is a minimum. The minimum value of  $m$  (0.9762) is the product of the individual factors (0.988 \* 0.998 \* 0.99). The factors that contribute to the total offset uncertainty,  $t$ , combine like voltage generators in series; that is, they add. Once  $t$  is found, the contribution in dB is calculated from:

$$t_{dB} = 10 \log \left( 1 \pm \frac{t}{P_m} \right) \quad (\text{Equation 4-7})$$

The maximum possible value  $P_{g_{z0}}$  using Equation 4-5 and substituting the values of Table 4-1, is:

$$\begin{aligned} P_{g_{z0} \max} &= \frac{M_{u \max} (P_m - t_{\min})}{K_{b \min} m_{\min}} \quad (\text{Equation 4-8}) \\ &= \frac{1.0367 (50 \mu\text{W} + 0.275 \mu\text{W})}{(0.97) (0.982)} \\ &= 54.7170 \mu\text{W} = 1.0943 P_m \end{aligned}$$

In Equation 4-8, the deviation of  $K_{bm}$  from the ideal value of one is used to calculate  $P_{g_{z0} \max}$ . In the same way, the minimum value of  $P_{g_{z0}}$  is:

$$\begin{aligned} P_{g_{z0} \min} &= \frac{M_{u \min} (P_m - t_{\max})}{K_{b \max} m_{\max}} \quad (\text{Equation 4-9}) \\ &= \frac{0.9639 (50 \mu\text{W} - 0.275 \mu\text{W})}{(1.03) (1.018)} \\ &= 45.7111 \mu\text{W} = 0.9142 P_m \end{aligned}$$

The uncertainty in  $P_{g_{z0}}$  may be stated in several other ways:

(1) As an absolute differential in power:

$$\Delta P_{g_{z0}} = P_{g_{z0}} \left( \frac{\Delta P_{g_{z0}}}{P_m} \right) = +4.7170 \text{ } \mu\text{W} \quad \text{(Equation 4-10)}$$

(2) As a fractional deviation:

$$\frac{\Delta P_{g_{z0}}}{P_m} = \frac{+4.7170}{50} = +0.0943 \quad \text{(Equation 4-11)}$$

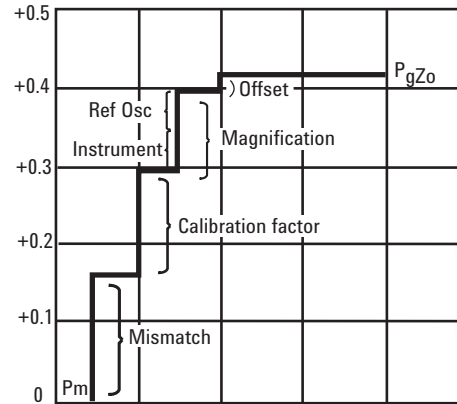


Figure 4-2. Graph of individual contributions to the total worst-case uncertainty.

(3) As a percent of the meter reading:

$$100 \times \frac{\Delta P_{g_{z0}}}{P_m} = \begin{matrix} +9.43 \\ -8.58 \end{matrix} \% \quad \text{(Equation 4-12)}$$

(4) As dB deviation from the meter reading:

$$\text{dB} = 10 \log \left( \frac{1.0943}{0.9142} \right) = \begin{matrix} +0.3915 \\ -0.3895 \end{matrix} \text{ dB} \quad \text{(Equation 4-13)}$$

An advantage to this last method of expressing uncertainty is that this number can also be found by summing the individual error factors expressed in dB.

Figure 4-2 is a graph of contributions to worst-case uncertainty shows that mismatch uncertainty is the largest single component of total uncertainty. This is typical of most power measurements. Magnification and offset uncertainties, the easiest to evaluate from specifications and often the only uncertainties evaluated, contribute less than one-third of the total uncertainty.

### RSS uncertainty method

The worst-case uncertainty is a very conservative approach. A more realistic method of combining uncertainties is the root-sum-of-the-squares (RSS) method. The RSS uncertainty is based on the fact that most of the errors of power measurement, although systematic and not random, are independent of each other. Since they are independent, it is reasonable to combine the individual uncertainties in an RSS manner.

Finding the RSS uncertainty requires that each individual uncertainty be expressed in fractional form. The RSS uncertainty for the power measurement Equation 4-5 is:

$$\frac{\Delta P_{g_{zo}}}{P_{g_{zo}}} = \left[ \left( \frac{\Delta M_u}{M_u} \right)^2 + \left( \frac{\Delta K_b}{K_b} \right)^2 + \left( \frac{\Delta m}{m} \right)^2 + \left( \frac{\Delta t}{P_m} \right)^2 \right]^{1/2}$$

(Equation 4-14)

Each of the factors of Equation 4-14, if not known directly, is also found by taking the RSS of its several components. Thus:

$$\frac{\Delta m}{m} = \left[ \left( \frac{\Delta m_1}{m_1} \right)^2 + \left( \frac{\Delta m_2}{m_2} \right)^2 + \dots \right]^{1/2}$$

(Equation 4-15)

Where  $m_1$ ,  $m_2$ , and so forth are the reference oscillator uncertainty, the instrumentation uncertainty, and so forth of Table 4-1. The extreme right hand column of Table 4-1 shows the components used to find the total RSS uncertainty. The result is  $\pm 4.3$  percent, which is much less than the worst case uncertainty of  $+10.1$  percent,  $-9.1$  percent. One characteristic of the RSS method is that the final result is always larger than the largest single component of uncertainty.

### A new international guide to the expression of uncertainty in measurement (ISO GUM)

In recent years, the world's metrology, standards and quality communities have authorized and implemented a new process for calculating and reporting the uncertainties of measurement. The process is based on a standard promulgated by ISO in Geneva, Switzerland, an adjunct organization of IEC. This process is documented in *ISO Guide to the Expression of Uncertainty in Measurement*, often referred to as the GUM. [1]

The NCSL International (previously National Conference of Standards Laboratories) in Boulder, CO, cooperating with the ANSI, adopted the ISO document as a U.S. National Standard, and introduced it in the U.S. as an industry document, ANSI/NCSL Z540-2-1996, *U.S. Guide to the Expression of Uncertainty in Measurement*. [2]

Both of the uncertainty standards operate within a larger metrology context, specified by ISO Guide 25, *General Requirements for the Competence of Calibration and Testing Laboratories*. [3] This document was adapted to a U.S. version with the identical title, ANSI/NCSL Z540-1-1994. [4]

Over the last several years, the ISO has replaced ISO Guide 25 with ISO/IEC 17025, *General Requirements for the Competence of Calibration and Testing Laboratories*. [4] It has been promulgated internationally, and achieved considerable standing in the test and standards communities.

In the U.S., the ANSI/NCSL Standards Writing Committee determined that world metrology would be best served with a single standard for general laboratory requirements. It has adopted the ISO/IEC 17025 document as a U.S. National Standard in cooperation with the American Society of Testing Materials (ASTM) and the American Society of Quality (ASQ). To meet the needs of those U.S. users who rely on the older ANSI/NCSL Z-540-1-1994, that standard has been officially extended for 5 years.

Because of its international scope of operations, Keysight has moved quickly to adopt ISO/IEC 17025 in lieu of its previous commitment to ANSI/NCSL Z-540-1. As a result, most of Keysight's production and support operations are moving to offer optional product-specific test data reports compliant to 17025. Keysight has assigned Option 1A7 to all of its products which meet the ISO 17025-compliant processes. Option 1A7 will assure compliance with 17025 for new products shipped from the factory and Keysight will provide for support re-calibrations to the same 17025-compliant processes, data and testing.

Generally, the impact of the ISO GUM is to inject a little more rigor and standardization into the metrology analysis. Traditionally, an uncertainty was viewed as having two components, namely, a random component and a systematic component. Random uncertainty presumably arises from unpredictable or stochastic temporal and spatial variations of influence quantities. Systematic uncertainty arises from a recognized effect or an influence that can be quantified.

The ISO GUM groups uncertainty components into two categories based on their method of evaluation, Type A and Type B. These categories apply to uncertainty, and are not substitutes for the words "random" and "systematic." Some systematic effects may be obtained by a Type A evaluation while in other cases by a Type B evaluation. Both types of evaluation are based on probability distributions. The uncertainty components resulting from either type are quantified by variances or standard deviations.

Briefly, the estimated variance characterizing an uncertainty component obtained from a Type A evaluation is calculated from a series of repeated measurements and is the familiar statistically estimated variance. Since standards laboratories regularly maintain histories of measured variables data on their standards, such data would usually conform to the Type A definition.

For an uncertainty component obtained from a Type B evaluation, the estimated variance,  $u^2$ , is evaluated using available knowledge. Type B evaluation is obtained from an assumed probability density function based on the belief that an event will occur, often called subjective probability, and is usually based on a pool of comparatively reliable information. Others might call it "measurement experience." Published data sheet specifications from a manufacturer would commonly fit the Type B definition.

Readers who are embarking on computing measurement uncertainties according to the ISO GUM should recognize that the above-mentioned documents may seem relatively simple enough in concept, and they are. But for more complex instrumentation the written specification uncertainties can often depend on multiple control settings and interacting signal conditions.

Impedance bridges, for example, measure parameters in complex number format. Network and spectrum analyzers have multi-layered specifications. Considerable attention is being expended by test and measurement organizations to define and characterize these important extensions of the basic GUM. [5, 6, 7]

## Power measurement model for ISO process

Beginning with the measurement Equation 4-5, and including power sensor linearity term  $P_{\ell}$ ,

$$P_{gZ_0} = \frac{M_u (P_m - t)}{P_{\ell} K_b m} \quad (\text{Equation 4-16})$$

The determination of  $m$  is through the calibration process. During calibration,  $P_{gZ_0}$  is set to the known power,  $P_{cal}$ . Substituting  $P_{cal}$  for  $P_{gZ_0}$  and rearranging Equation 4-16, the equation for  $m$  is:

$$m = \frac{M_{uc} (P_{mc} - t)}{K_c P_{cal}} \quad (\text{Equation 4-17})$$

where:

$m$  = power meter gain term

$M_{uc}$  = gain due to the mismatch between the sensor and the internal calibration power source

$P_{mc}$  = power level indicated by the power meter during calibration

$t$  = power meter zero offset

$K_c$  = power sensor calibration factor at the calibration frequency

$P_{cal}$  = power delivered to a  $Z_0$  load by the power meter calibration output

In equations 4-16 and 4-17,  $t$  represents the power meter zero offset.

In the glossary of *Fundamentals Part I*,  $t$  is described as the sum of the zero set value,  $Z_s$ ; zero carryover,  $Z_c$ ; noise,  $N$ ; and drift,  $D$ . However, assuming the zero procedure occurs just prior to calibration,  $D$  is zero during calibration, whereas  $D$  is non-zero during power meter measurements. To allow  $t$  to represent the same quantity in the equation for  $P_{gZ_0}$  and  $m$ , the equation for  $t$  is defined as:

$$t = Z_s + Z_c + N \quad (\text{Equation 4-18})$$

where,

$Z_s$  = power meter zero set value

$Z_c$  = power meter zero carryover value

$N$  = power meter noise

and the equation for  $P_{gZ_0}$  is redefined as

$$P_{gZ_0} = \frac{M_u (P_m - (t+D))}{P_{\ell} K_b m} \quad (\text{Equation 4-19})$$

where  $D$  = power meter drift.

Equation 4-19 is the measurement equation for a power meter measurement. There are eleven input quantities that ultimately determine the estimated value of  $P_{gzo}$ . These are  $M_u$ ,  $P_m$ ,  $D$ ,  $K_b$  from Equation 4-19;  $Z_s$ ,  $Z_c$ ,  $N$  from Equation 4-18; and  $M_{uc}$ ,  $P_{mc}$ ,  $K_c$ , and  $P_{cal}$  from Equation 4-17. It is possible to combine equations in order to represent  $P_{gzo}$  in terms of the 11 defined input quantities. This is a relatively complicated derivation, but the result is the uncertainty in terms of the 11 quantities:

$$u^2(P_{gzo}) = P_{gzo}^2 \left[ \frac{u^2(M_u)}{M_u^2} + \frac{u^2(P_m)}{(P_m - (t + D))^2} + \frac{u^2(D)}{(P_m - (t + D))^2} + \frac{u^2(K_b)}{K_b^2} + \frac{u^2(M_{uc})}{M_{uc}^2} \right. \\ \left. + \frac{u^2(P_{mc})}{(P_{mc} - t)^2} + \frac{u^2(K_c)}{K_c^2} + \frac{u^2(P_{cal})}{P_{cal}^2} \right. \\ \left. + \left( \frac{1}{(P_m - (t + D))^2} + \frac{1}{(P_{mc} - t)^2} - \frac{2}{K_c P_{cal} m (P_m - (t + D))} \right) (u^2(Z_s) + u^2(Z_c) + u^2(N)) \right]$$

(Equation 4-20)

Solving with some nominal values of several input quantities simplifies Equation 4-20,

$$\begin{aligned} M_u &= 1 \\ M_{uc} &= 1 \\ P_{mc} &= P_{cal} \\ Z_s &= 0 \\ Z_c &= 0 \\ N &= 0 \\ D &= 0 \\ t &= 0 \\ m &= 1/K_c \end{aligned}$$

$$\frac{u^2(P_{gzo})}{P_{gzo}^2} = \frac{u^2(M_u)}{M_u^2} + \frac{u^2(P_m)}{P_m^2} + \frac{u^2(D)}{P_m^2} + \frac{u^2(K_b)}{K_b^2} + \frac{u^2(M_{uc})}{M_{uc}^2} + \frac{u^2(P_{mc})}{P_{mc}^2} \\ + \frac{u^2(K_c)}{K_c^2} + \frac{u^2(P_{cal})}{P_{cal}^2} + \left( \frac{1}{P_m} - \frac{1}{P_{cal}} \right)^2 (u^2(Z_s) + u^2(Z_c) + u^2(N))$$

(Equation 4-21)

The following Table 4-2 summarizes the various uncertainties shown in Equation 4-21.

Table 4-2. Standard uncertainties for the Z540-2 process.

Standard uncertainty	Source
u(Mu)	Mismatch gain uncertainty between the sensor and the generator. The standard uncertainty is dependent upon the reflection coefficients of the sensor and the generator. Refer to the mismatch model. Reflection coefficients may have different distributions as shown in Figure 4-3.
u(Muc)	Mismatch gain uncertainty between the sensor and the calibrator output of the power meter. The standard uncertainty is dependent upon the reflection coefficients of the sensor and the calibrator output. Refer to the mismatch model. Note: the calibrator output reflection coefficient is not a specified parameter of the E4418A power meter. AN64-1 suggests $\rho_g = 0.024$ .
u(Pm)	Power meter instrumentation uncertainty.
u(Pmc)	Power meter instrumentation uncertainty (during calibration)
u(D)	Power meter drift uncertainty.
u(Kb)	Sensor calibration factor uncertainty. Typically, the value of the uncertainty is reported along with the calibration factor by the calibration laboratory or the manufacturer.
u(Kc)	Sensor calibration factor uncertainty at the frequency of the power meter calibrator output. If the sensor is calibrated relative to the associated calibrator output frequency, $K_C = 1$ and $u(K_C) = 0$ .
u(P <sub>l</sub> )	Power sensor linearity, which is related to power range. Generally negligible on lower ranges but has higher uncertainty at high power levels.
u(Pcal)	Calibrator output power level uncertainty.
u(Zs)	Power meter zero set uncertainty.
u(Zc)	Power meter zero carryover uncertainty.
u(N)	Power meter and sensor noise uncertainty.

### Standard uncertainty of the mismatch model

The standard uncertainty of the mismatch expression,  $u(M_U)$ , assuming no knowledge of the phase, depends upon the statistical distribution that best represents the moduli of  $\Gamma_g$  and  $\Gamma_\ell$ .

Combining equations 2-21 and 2-22, the power dissipated in a load when  $\Gamma_\ell$  is not 0 is:

$$P_d = P_{gzo} \frac{1 - |\Gamma_\ell|^2}{|1 - \Gamma_g \Gamma_\ell|^2} \quad (\text{Equation 4-22})$$

The numerator in Equation 4-22 is known as mismatch loss, and the denominator represents the mismatch uncertainty:

$$M_U = |1 - \Gamma_g \Gamma_\ell|^2 \quad (\text{Equation 4-23})$$

$M_U$  is the gain or loss due to multiple reflections between the generator and the load. If both the moduli and phase angles of  $\Gamma_g$  and  $\Gamma_\ell$  are known,  $M_U$  can be precisely determined from Equation 4-23. Generally, an estimate of the moduli exists, but the phase angles of  $\Gamma_g$  and  $\Gamma_\ell$  are not known.

Consider six cases:

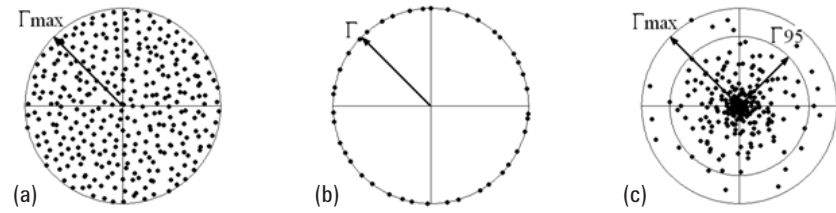


Figure 4-3. When the reflection coefficients of the generator and load are not known, the user may estimate probabilities of the mismatch uncertainty according to these cases:

- Case A: Two disks distribution of  $\Gamma$  (also known as uniform inside circle).
- Case B: Two rings distribution of  $\Gamma$  (also known as fixed).
- Case C: Two Rayleigh distribution of  $|\Gamma|$ .
- Case D: One disk and one ring distribution of  $\Gamma$ .
- Case E: One ring distribution of  $\Gamma$  and one Rayleigh distribution of  $|\Gamma|$ .
- Case F: Known magnitude of  $\Gamma$ , known phase (both generator and load)

Table 4-3. Summary of the six different cases.

Case	$u(M_U)$	Distribution	Type
A	$\frac{1}{\sqrt{2}} \times  \Gamma_{\max_g}  \times  \Gamma_{\max_\ell} $	–	Disk/Disk (uniform inside circle)
B	$\sqrt{2} \times  \Gamma_g  \times  \Gamma_\ell $	U-shape	Ring/Ring (fixed)
C	$\frac{\sqrt{2}}{\ln(20)} \times \Gamma_{95_g} \times \Gamma_{95_\ell}$	Bell-shape	Rayleigh/Rayleigh
D	$ \Gamma_{\max_g}  \times  \Gamma_\ell $	–	Disk/Ring
E	$\sqrt{\frac{2}{\ln(20)}} \times \Gamma_{95_1} \times \Gamma_2$	–	Ring/Rayleigh
F	Use ISO GUM equation	–	–

#### Case A: Two disks distribution of $\Gamma$

See Figure 4-3(a). Both the generator and the load have  $\Gamma$  of known maximum specified value of magnitude. For each component, the vector value of  $\Gamma$  has equal probability of lying anywhere within the circle bounded by that maximum magnitude. This distribution has an absolute phase that is uniformly distributed, as well as the relative phase between the two components. The PDF of the mismatch uncertainty from the combination of these two  $\Gamma$  is illustrated by the histogram from a Monte Carlo simulation for  $\Gamma_{1\max} = 0.1$  and  $\Gamma_{2\max} = 0.05$  in Figure 4-4. A closed-form evaluation of the standard deviation (standard uncertainty) of this distribution gives this equation:

$$u(M_U) = \frac{1}{\sqrt{2}} \times |\Gamma_{\max_g}| \times |\Gamma_{\max_\ell}|$$



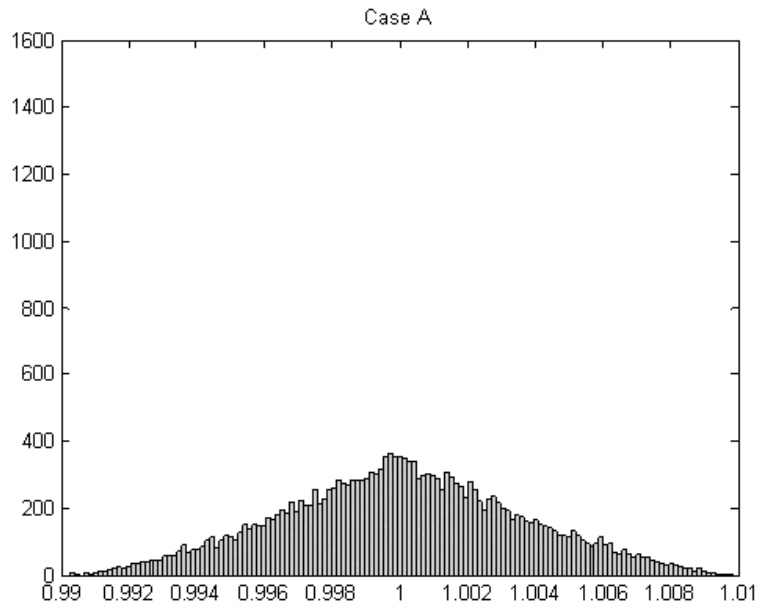


Figure 4-4. Histogram of  $M_U$  for case A, two disks distribution.

#### Case B: Two rings distribution of $\Gamma$

See Figure 4-3(b). Both the generator and the load have  $\Gamma$  of known magnitude. Both the generator and the load have an absolute phase that is uniformly distributed, as well as the relative phase between the two components. The PDF of the mismatch uncertainty from the combination of these two  $\Gamma$  is illustrated by the histogram from a Monte Carlo simulation for  $\Gamma_1 = 0.1$  and  $\Gamma_2 = 0.05$  in Figure 4-5, the well-known U-shaped distribution. A closed-form evaluation of the standard deviation (standard uncertainty) of this distribution gives this equation:

$$u(M_U) = \sqrt{2} \times |\Gamma_g| \times |\Gamma_\ell|$$

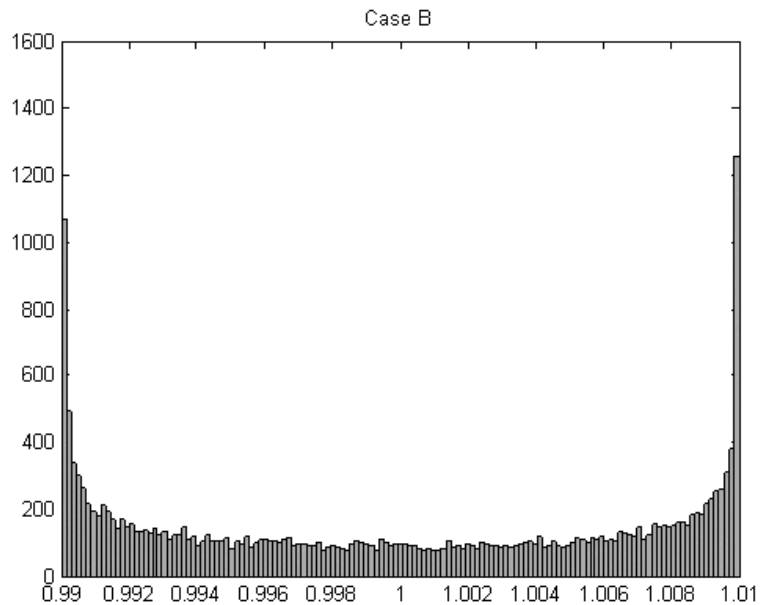


Figure 4-5. Histogram of  $M_U$  for case B, two rings distribution, showing the U-shaped distribution.

Case C: Two Rayleigh distribution of  $|\Gamma|$

See Figure 4-3(c). Both  $\Gamma$  have Rayleigh magnitude distributions, with a known 95<sup>th</sup> percentile,  $\Gamma_{95}$ . Mismatch standard uncertainty is:

$$u(M_U) = \frac{\sqrt{2}}{\ln(20)} \times \Gamma_{95_g} \times \Gamma_{95_\ell}$$

Please note that  $\Gamma_{95}$  is less than  $\Gamma_{max}$ . If we assume that  $\Gamma_{max}$  is actually the magnitude  $\Gamma$  that corresponds to a 0.27% yield loss in manufacturing (the equivalent of “3 sigma” performance in a Gaussian-distributed specification), then  $\Gamma_{95} = 0.712 \times \Gamma_{max}$ . In practice,  $\Gamma_{max}$  is usually exceeds  $\Gamma_{95}$  by a greater ratio than this, making this method still conservative, as described in the reference 9. Case C will usually give lower uncertainties than case A by a factor of three and lower than case B by a factor of six or more.

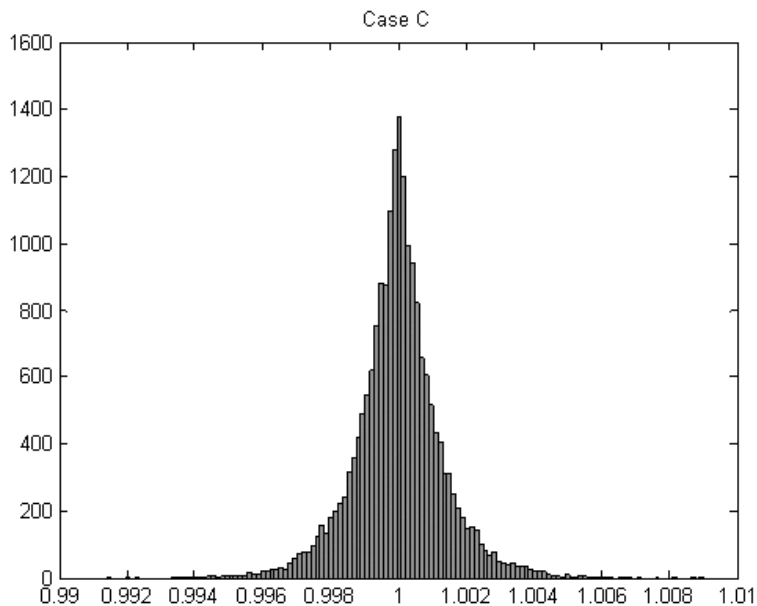


Figure 4-6. Histogram of  $M_U$  for case C, two Rayleigh distribution of magnitude, showing a bell shape.

Case D: One disk and one ring distribution of  $\Gamma$

One of the  $\Gamma$  has a known magnitude while the other has a known maximum specified value of magnitude. Both the generator and the load have an absolute phase that is uniformly distributed, as well as the relative phase between the two components. The PDF of the mismatch uncertainty from the combination of these two  $\Gamma$  is illustrated by the histogram from a Monte Carlo simulation for  $\Gamma_1 = 0.1$  and  $\Gamma_2 = 0.05$  in Figure 4-7. A closed-form evaluation of the standard deviation (standard uncertainty) of this distribution gives:

$$u(M_U) = |\Gamma_{max_g}| \times |\Gamma_\ell|$$

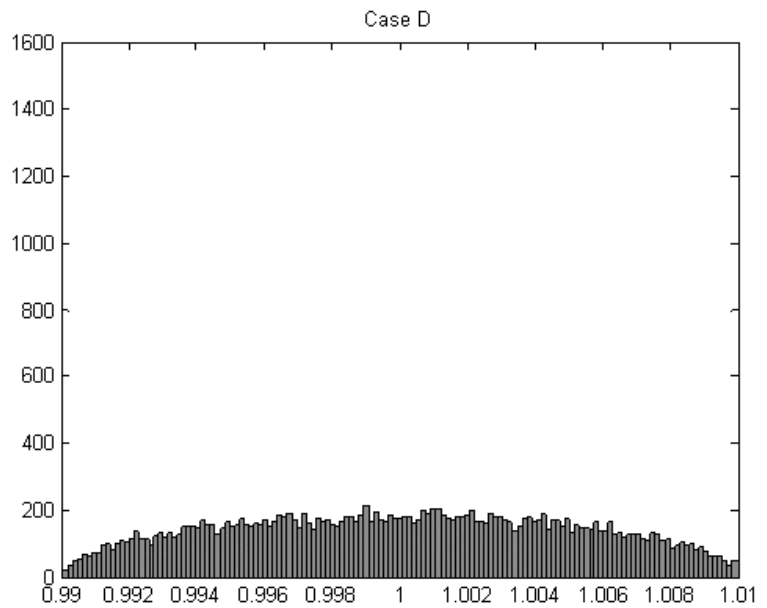


Figure 4-7. Histogram of  $M_U$  for case D, one disk and one ring distribution.

Case E: One ring distribution of  $\Gamma$  and one Rayleigh distribution of  $|\Gamma|$ . One of the  $\Gamma$  has a known magnitude while the other has a known 95th percentile value of magnitude. Both the generator and the load have an absolute phase that is uniformly distributed, as well as the relative phase between the two components. The PDF of this mismatch uncertainty is illustrated by the histogram for  $\Gamma_1 = 0.1$  and  $\Gamma_2 = 0.05$  in Figure 4-8. The shape of this histogram will vary substantially with the ratio of the two  $\Gamma$  values. A closed-form evaluation of the standard deviation (standard uncertainty) of this distribution gives:

$$u(M_U) = \sqrt{\frac{2}{\ln(20)}} \times \Gamma_{95} \times \Gamma_2$$

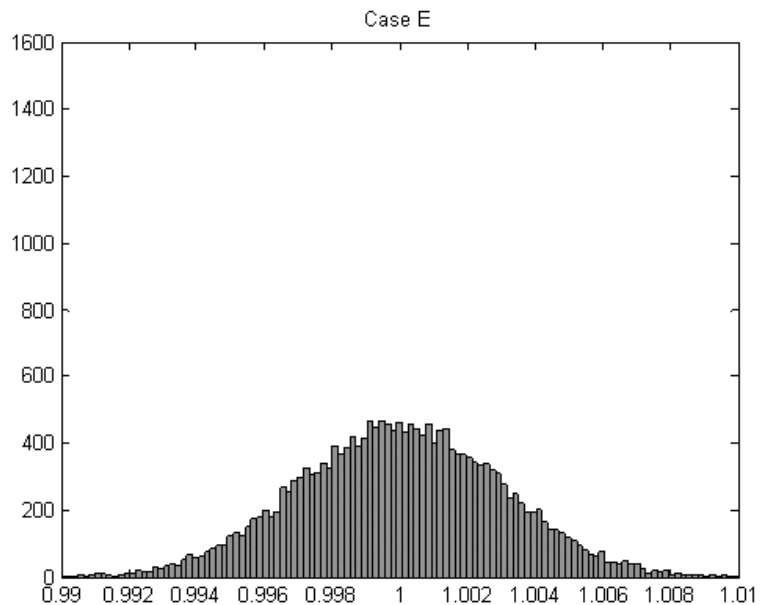


Figure 4-8. Histogram of  $M_U$  for case E, one ring and one Rayleigh distribution.

Case F: Known magnitude of  $\Gamma$ , known phase (both generator and load)  
 In the case where both  $\rho$  and phase are known for the generator and the load, the mismatch correction can be applied to the measurement to obtain a more accurate result. There is no longer the need to assume certain distribution for the mismatch vectors and the uncertainty of the mismatch term can be determined using the ISO model (GUM).

Mismatch standard uncertainty is:

$$M_u = |1 - \Gamma_g \Gamma_\ell|^2$$

The mismatch uncertainty can be calculated as shown below, where  $u(M_u)$  is the standard uncertainty

$$u(M_u)^2 = (u(\Gamma_g) |1 - \Gamma_g \Gamma_\ell| |\Gamma_\ell|)^2 + (u(\Gamma_\ell) |1 - \Gamma_g \Gamma_\ell| |\Gamma_g|)^2$$

$$u(M_u) = \sqrt{(u(\Gamma_g) |1 - \Gamma_g \Gamma_\ell| |\Gamma_\ell|)^2 + (u(\Gamma_\ell) |1 - \Gamma_g \Gamma_\ell| |\Gamma_g|)^2}$$

$u(\Gamma) = \rho$  standard uncertainty of sensor which can be obtained from measurement report or operating manual.

Analyzing the mismatch uncertainty is a complex process. Historically, most users have adopted the U-shape distribution method. This results in overreporting of the uncertainty. For a user whose goal is to minimize risk of underreporting the uncertainty, this can be acceptable. But the GUM (subsection E.1) guides us to determine a realistic uncertainty, not a conservative uncertainty. Using the Rayleigh distribution will give a more realistic mismatch uncertainty.

## Example of calculation of uncertainty using ISO model

Recognizing that each uncertainty calculation must meet a particular measuring requirement, the user will need to structure their calculations for appropriate conditions. This following measurement situation reflects some assumed and stated conditions for each of the parameters. The power meter is assumed to be the Keysight E4418B power meter, and the power sensor is assumed to be the E9300A power sensor.

Measurement conditions for calculation: Unknown CW power, 2 GHz, 50 microwatt level (-13 dBm).

Calculation comments for each parameter:

$u(M_u)$  Uncertainty of mismatch gain between sensor and generator at 2 GHz. Use case (a) and assume generator reflection coefficient specification (from data sheet) is  $|\Gamma_g| = 0.1$ . Assume the E9300A sensor reflection coefficient specification from the datasheet is  $|\Gamma_\ell| = 0.087$  (Uniform inside circle).

Use mismatch gain equation of  $M_u = |1 \pm \Gamma_g \Gamma_\ell|^2$

$$\frac{u(M_u)}{M_u} = \frac{1}{\sqrt{2}} \times 0.1 \times 0.087 = 0.61\% \text{ (1-sigma)}$$

$u(M_{uc})$  Uncertainty of mismatch gain between sensor and 50 MHz calibrator source. Use case (a) and assume source reflection coefficient specification (from data sheet) is  $|\Gamma_g| = 0.029$ . E9300A sensor reflection coefficient specification from the datasheet is  $|\Gamma_\ell| = 0.061$  at 50 MHz. Use mismatch gain equation as above.

$$\frac{u(M_{uc})}{M_{uc}} = \frac{1}{\sqrt{2}} \times 0.029 \times 0.061 = 0.13\% \text{ (1-sigma)}$$

$u(P_m)$  E4418B power meter instrumentation uncertainty is specified at  $\pm 0.5$  percent (rectangular distribution). Use  $\sqrt{3}$  for divisor.

$$\frac{u(P_m)}{P_m} = \frac{0.005}{\sqrt{3}} = 0.29\% \text{ (1-sigma)}$$

$u(P_{mc})$  E4418B power meter uncertainty during calibration. Specified at  $\pm 0.5$  percent (rectangular distribution).

$$\frac{u(P_{mc})}{P_{mc}} = \frac{0.005}{\sqrt{3}} = 0.29\% \text{ (1-sigma)}$$

$u(D)$  E4418B power meter drift uncertainty due to sensor drift. Assume constant temperature, measurement taken one hour after calibration. From data sheet E9300A sensors are  $\pm 150$  pW (rectangular distribution).

$$\frac{u(D)}{P_m} = \frac{150 \times 10^{-12}}{50 \times 10^{-6}} \times \frac{1}{\sqrt{3}} = 0.00017\% \text{ (1-sigma)}$$

$u(K_b)$  E9300A power sensor calibration factor uncertainty at 2 GHz. From the calibration certificate, specification is  $\pm 1.7$  percent (Gaussian distribution, 2-sigma).

$$\frac{u(K_b)}{K_b} = \frac{0.017}{2} = 0.85\% \text{ (1-sigma)}$$

In this example, the calibration factor uncertainty used is assumed to be relative. If absolute uncertainty is used as stated in the calibration certificate, relative uncertainty is obtained by dividing the absolute uncertainty with the calibration factor.

$u(K_c)$  E9300A power sensor cal factor uncertainty at 50 MHz is assumed to be 0 since it is referred to the internal calibration source.

$$\frac{u(K_c)}{K_c} = 0$$

$u(P_l)$  E9300A power sensor linearity uncertainty. For the 100  $\mu$ W assumed range, this is specified for  $25 \pm 10$  °C as  $\pm 3$  percent (assume Gaussian distribution is 2-sigma).

$$\frac{u(P_l)}{P_l} = \frac{0.03}{2} = 1.5\% \text{ (1-sigma)}$$

$u(P_{cal})$  50 MHz calibrator power reference output uncertainty is specified at 0.5 percent, RSS, for 2 years ( $25 \pm 10$  °C). Gaussian distribution is 2-sigma. (new specification)

$$\frac{u(P_{cal})}{P_{cal}} = \frac{0.005}{2} = 0.25\% \text{ (2-sigma)}$$

$u(Z_s)$  E4418B power meter zero set uncertainty is specified at  $\pm 500$  pW (rectangular distribution).

$$u(Z_s) \left( \frac{1}{P_m} - \frac{1}{P_{cal}} \right) = \left( \frac{1}{50 \times 10^{-6}} - \frac{1}{10^{-3}} \right) \times \frac{500 \times 10^{-12}}{\sqrt{3}} = 0.0005\% \text{ (1-sigma)}$$

$u(Z_c)$  E4418B power meter zero carryover is included in the overall instrument uncertainty specification, since there are no ranges as such in this meter. For other power meters this would need to be considered.

$$u(Z_c) \left( \frac{1}{P_m} - \frac{1}{P_{cal}} \right) = 0$$

$u(N)$  E4418B power meter noise uncertainty is  $\pm 700$  pW and negligible at the 50 mW power level.

$$u(N) \left( \frac{1}{P_m} - \frac{1}{P_{cal}} \right) = \left( \frac{1}{50 \times 10^{-6}} - \frac{1}{10^{-3}} \right) \times \frac{700 \times 10^{-12}}{\sqrt{3}} = 0.0007\% \text{ (1-sigma)}$$

Using the above comments, Table 4-4 summarizes the various uncertainty factors. Each factor is normalized to a one sigma value. In the case of a data sheet specification, the divisor factor used to convert to one sigma is square root of three. These sigma values are added in RSS fashion and then multiplied with the coverage factor. The coverage factor is a guard band number, typically two is used, but experience and knowledge of the measurement process allows for the user to establish any other value.

Table 4-4. Worksheet for uncertainties calculation using ISO process.

Symbol	Source of uncertainty	Value ±%	Probability distribution	Divisor	D(Kx)
Mu	Mismatch gain between generator and sensor	$ \Gamma_g  = 0.1$ $ \Gamma_s  = 0.087$	–	$\sqrt{2}$	0.61%
Muc	Mismatch gain between calibration source and sensor	$ \Gamma_g  = 0.029$ $ \Gamma_s  = 0.061$	–	$\sqrt{2}$	0.13%
Pm	Power meter instrumentation	0.5%	rectangular	$\sqrt{3}$	0.29%
Pmc	Power meter instrumentation during calibration	0.5%	rectangular	$\sqrt{3}$	0.29%
D	Power meter drift	±150 pW	rectangular	$\sqrt{3}$	0.00017%
Kb	Sensor calibration factor	1.7%	Gaussian	2	0.85%
Kc	Sensor calibration factor at 50 MHz	0	rectangular	–	0
Pl	Power sensor linearity	3.0%	Gaussian	2	1.5%
Pcal	Calibrator output power	0.6%	Gaussian	2	0.25%
Zs	Power meter zero set	±500 pW	rectangular	$\sqrt{3}$	0.0005%
Zc	Power meter zero carryover	0	rectangular	$\sqrt{3}$	0
N	Power meter and sensor noise	±700 pW	rectangular	$\sqrt{3}$	0.0007%
Combined uncertainty—RSSed					1.90%
Expanded uncertainty			Coverage factor K = 2	3.79%	

(1) Monte Carlo simulation

## Example of calculation of uncertainty of USB sensor using ISO model

There will be some differences in measurement uncertainty calculations when using the U2000A series USB power sensors instead of the usual power meter and power sensor combination as shown in the following example.

Let us assume the power sensor to be a U2000A power sensor, taking the same measurement conditions for the following calculations: Unknown CW power, 2 GHz, 50 microwatt level (−13 dBm).

Calculation comments for each parameter:

$u(M_U)$  Uncertainty of mismatch gain between sensor and generator at 2 GHz. Assume generator reflection coefficient specification (from data sheet) is  $|\Gamma_g| = 0.111$  (Uniform inside circle). The U2000A sensor datasheet shows a value of  $|\Gamma_\ell| = 0.087$  (Uniform inside circle).

$$\frac{u(M_U)}{M_U} = 0.111 \times 0.087 \times \frac{1}{\sqrt{2}} = 0.68\%$$

$u(M_{uc})$  Uncertainty of mismatch gain between sensor and 50 MHz calibrator source is not applicable in this case because of the absence of the 50 MHz calibrator.

$u(P_m)$  U2000A power sensor will measure power without involving power meter. Therefore, power meter instrumentation uncertainty is irrelevant and not applicable.

$u(P_{mc})$  U2000A power meter uncertainty calibration does not apply for similar reason.

$u(D)$  U2000A power sensor drift uncertainty. Let us assume constant temperature, measurement taken within one hour after zero set and after 24-hour warm-up of the power sensor. Then from the datasheet, U2000A sensor zero drift is  $\pm 1.5$  nW (rectangular distribution).

$$\frac{u(D)}{P_m} = \frac{1.5 \times 10^{-9}}{50 \times 10^{-6}} \times \frac{1}{\sqrt{3}} = 0.0017\%$$

$u(K_b)$  U2000A power sensor calibration factor uncertainty at 2 GHz. From the datasheet, the specification is  $\pm 2.0$  percent (Gaussian distribution, 2-sigma).

$$\frac{u(K_b)}{K_b} = \frac{0.02}{2} = 1.0000\%$$

In this example, the calibration factor uncertainty used is assumed to be relative. If absolute uncertainty is used as stated in the calibration certificate, relative uncertainty is obtained by dividing the absolute uncertainty with the calibration factor.

$u(K_c)$  No calibration is required for the U2000A as there will not be any sensor-meter path loss calibration.

$u(P_a)$  U2000A power sensor absolute power uncertainty. This uncertainty includes calibration uncertainties of reference power and linearity. The specification at −13 dBm is  $\pm 3$  percent when operated within  $25 \pm 10$  °C (assume Gaussian distribution is 2-sigma).

$$\frac{u(P_a)}{P_a} = \frac{0.03}{2} = 1.5000\%$$



- $u(P_{cal})$  There is no 50 MHz calibration for the U2000A. Therefore, there is no uncertainty contributed.
- $u(Z_s)$  U2000A power sensor internal zero set uncertainty is specified at  $\pm 12$  nW (rectangular distribution).  

$$u(Z_s) \left( \frac{1}{P_m} \right) = \frac{1}{50 \times 10^{-6}} \times \frac{12 \times 10^{-9}}{\sqrt{3}} = 0.0138\%$$
- $u(Z_c)$  Usage of U2000A does not require a power meter. Therefore, there is no power meter zero carry over.
- $u(N)$  U2000A power sensor noise uncertainty is  $\pm 15$  nW (rectangular distribution). Assume number of averages is set to 16 and hence, the noise multiplier is one.  

$$u(N) \left( \frac{1}{P_m} \right) = \frac{1}{50 \times 10^{-6}} \times \frac{15 \times 10^{-9}}{\sqrt{3}} = 0.0173\%$$

Using the above comments, Table 4-5 summarizes the various uncertainty factors.

Table 4-5. Worksheet for uncertainties calculation of USB sensor using ISO process.

Symbol	Source of uncertainty	Value $\pm\%$	Probability distribution	Divisor	D(Kx)
Mu	Mismatch gain between generator and sensor	$ \Gamma_g  = 0.111$ $ \Gamma_s  = 0.087$	–	$\sqrt{2}$	0.68%
D	Power meter drift	$\pm 1.5$ nW	rectangular	$\sqrt{3}$	0.0017%
Kb	Sensor calibration factor	2.0%	Gaussian	2	1.00%
Pa	Power sensor absolute power	3.0%	Gaussian	2	1.5%
Zs	Power meter zero set	$\pm 12$ nW	rectangular	$\sqrt{3}$	0.0138%
N	Power meter and sensor noise	$\pm 15$ nW	rectangular	$\sqrt{3}$	0.0173%
Combined uncertainty—RSSed					1.93%
Expanded uncertainty			Coverage factor K = 2	3.85%	

- [1] "ISO Guide to the Expression of Uncertainty in Measurement," International Organization for Standardization, Geneva, Switzerland, ISBN 92-67-10188-9, 1995.
- [2] "U.S. Guide to the Expression of Uncertainty in Measurement," ANSI/NCSL Z540-2-1996, NCSL International, Boulder, CO.
- [3] ISO Guide 2, "General Requirements for the Competence of Calibration and Testing Laboratories," ISO Guide 25, International Organization for Standardization, Geneva, Switzerland. This same title now applies to ISO/IEC EN 17025.
- [4] "General Requirements for the Competence of Calibration and Testing Laboratories," ANSI/NCSL Z540-1-1994, NCSL International, Boulder, CO.
- [5] Moens, Jon C. "Software Technology to Support Measurement Uncertainty for Complex Electronic Test Equipment," NCSLI 2002 San Diego Conference, NCSL International, Boulder, CO.
- [6] Kasuga, Makoto, "Adapting The ISO GUM For A Practical Approach To Uncertainty Calculation Of Complex Numbers," NCSLI 2002 San Diego Conference, NCSL International, Boulder, CO.
- [7] Abell, David and Moens, Jon C., "Meeting ISO 17025 Requirements for Complex Electronic Test Equipment," Cal Lab Magazine, Oct/Dec, 2002.
- [8] Harris, I.A., and Warner, F.L., "Re-examination of Mismatch Uncertainty when Measuring Microwave Power and Attenuation," Proceedings of the British IEE, Vol. 128, pp 35-41, Feb 1981.
- [9] Dobbert, Michael and Gorin, Joe, "Revisiting Mismatch Uncertainty with the Rayleigh Distribution." To be published approximately July, 2011.
- [10] Hall, Blair (via internet), "Mismatch Uncertainty: representations for complex calculations." 29<sup>th</sup> ANAMET, March 2008.

### **General References**

- NAMAS NIS 3003, "The Expression of Uncertainty and confidence in Measurement for Calibrations," Edition 8, NAMAS Executive, National Physical Laboratory, Teddington, TW11 0LW, England, 1995.
- B. N. Taylor and C. E. Kuyatt, "Guidelines for Evaluating and Expressing the Uncertainty of NIST Measurement Results," NIST Technical Note 1297, National Institute of Standards and Technology.
- NCSL Recommended Practice RP-12, "Determining and Reporting Measurement Uncertainties," National Conference of Standards Laboratories.

**myKeysight**

**myKeysight**

[www.keysight.com/find/mykeysight](http://www.keysight.com/find/mykeysight)

A personalized view into the information most relevant to you.



[www.axiestandard.org](http://www.axiestandard.org)

AdvancedTCA® Extensions for Instrumentation and Test (AXIe) is an open standard that extends the AdvancedTCA for general purpose and semiconductor test. Keysight is a founding member of the AXIe consortium. ATCA®, AdvancedTCA®, and the ATCA logo are registered US trademarks of the PCI Industrial Computer Manufacturers Group.



[www.lxistandard.org](http://www.lxistandard.org)

LAN eXtensions for Instruments puts the power of Ethernet and the Web inside your test systems. Keysight is a founding member of the LXI consortium.



[www.pxisa.org](http://www.pxisa.org)

PCI eXtensions for Instrumentation (PXI) modular instrumentation delivers a rugged, PC-based high-performance measurement and automation system.



**Three-Year Warranty**

[www.keysight.com/find/ThreeYearWarranty](http://www.keysight.com/find/ThreeYearWarranty)

Keysight's commitment to superior product quality and lower total cost of ownership. The only test and measurement company with three-year warranty standard on all instruments, worldwide.



**Keysight Assurance Plans**

[www.keysight.com/find/AssurancePlans](http://www.keysight.com/find/AssurancePlans)

Up to five years of protection and no budgetary surprises to ensure your instruments are operating to specification so you can rely on accurate measurements.



[www.keysight.com/quality](http://www.keysight.com/quality)

Keysight Technologies, Inc.  
DEKRA Certified ISO 9001:2008  
Quality Management System

**Keysight Channel Partners**

[www.keysight.com/find/channelpartners](http://www.keysight.com/find/channelpartners)

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

Bluetooth and Bluetooth Logo are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to Keysight Technologies.

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: [www.keysight.com/find/contactus](http://www.keysight.com/find/contactus)

**Americas**

Canada	(877) 894 4414
Brazil	55 11 3351 7010
Mexico	001 800 254 2440
United States	(800) 829 4444

**Asia Pacific**

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 6375 8100

**Europe & Middle East**

Austria	0800 001122
Belgium	0800 58580
Finland	0800 523252
France	0805 980333
Germany	0800 6270999
Ireland	1800 832700
Israel	1 809 343051
Italy	800 599100
Luxembourg	+32 800 58580
Netherlands	0800 0233200
Russia	8800 5009286
Spain	0800 000154
Sweden	0200 882255
Switzerland	0800 805353
	Opt. 1 (DE)
	Opt. 2 (FR)
	Opt. 3 (IT)
United Kingdom	0800 0260637

For other unlisted countries:  
[www.keysight.com/find/contactus](http://www.keysight.com/find/contactus)  
(BP-07-10-14)

