


Keysight Technologies

Performing W-CDMA Tx Dynamic Power Measurements Using the 8960 Wireless Communications Test Set

Application Note

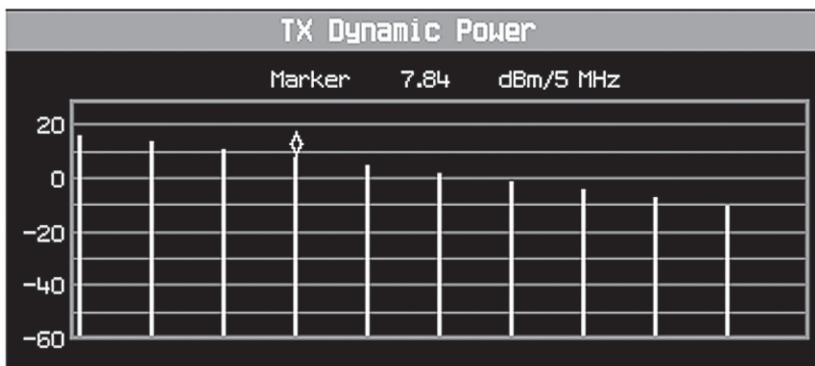

This paper illustrates how to use the Tx dynamic power measurement in the Keysight Technologies, Inc. 8960 to measure user equipment (UE) power sequences quickly and accurately.

Tx Dynamic Power Measurement Overview

The Tx dynamic power measurement allows you to measure UE output power sequences that step down in power with a fixed step size (–90 to –0.1 dB) and duration (20, 40, or 80 ms.) The UE's output power sequence may span some or all of the measurement's input range of –61 to +28 dBm, in up to 99 steps.

To use the measurement, you must first set **Measurement Frequency** to the expected UE transmitter frequency. You must also set **Power Control** to **Manual** and set **Manual Power** to the initial transmit power of the UE's power sequence to properly range the test set's receiver.

You must specify the **Power Step Size**, **Power Step Time**, and **Number of Power Steps** in the UE's power sequence.

The UE must trigger the measurement with a positive change in power from 20 dB below the initial transmit power. To ensure successful triggering, it is recommended that you first order the UE to transmit continuously at the initial transmit power level, initiate the measurement, then order the UE to drop and then raise its output power by more than 20 dB to create the RF rise trigger. See Figure 1.

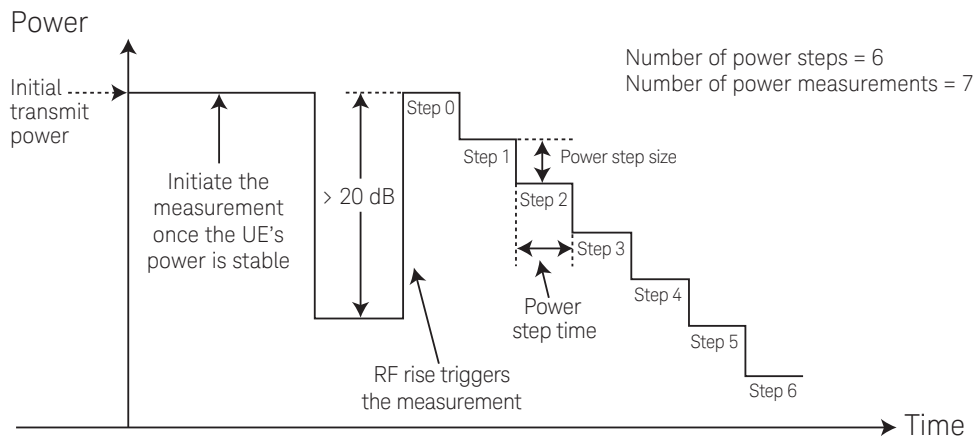


Figure 1. Tx dynamic power triggering

Once triggered, the Tx dynamic power measurement performs a series of channel power measurements; one at each step of the power sequence. Before measuring the power level of step 0, the test set tunes its receiver according to the **Manual Power** setting. The test set then tunes its receiver to the proper level before performing each subsequent channel power measurement based on the **Power Step Size** setting and the measured power of the prior step. (This allows the measurement to track UEs that do not correctly decrease power according to the **Power Step Size** setting.) The UE must step its power down and then hold its power constant for each step in the test sequence. (The step duration is determined by **Power Step Time**.) After completing a measurement at each of the requested power steps (based on the **Number of Power Steps** setting), the test set returns power results for the initial UE transmit power (step 0), and for each of the steps. See Figure 1.

Tx Dynamic Power Measurement Example

This section illustrates how to configure the Tx dynamic power measurement to measure the example power sequence pictured in Figure 2.

Test set settings

Measurement Timeout = 10 s
 Power Control = Manual
 Manual Power = 12 dBm
 Measurement Frequency = 1900 MHz
 Power Step Size = -3 dB
 Number of Power Steps = 9
 Power Step Time = 20 ms

Remote commands

```
SETup:WTDPower:TIMEout 10
RFANalyzer:CONTRol:POWer:AUTO OFF
RFANalyzer:MANual:POWer 12
RFANalyzer:MANual:MEAS 1900 MHz
SETup:WTDPower:STEP -3
SETup:WTDPower:STEP:COUNT 9
SETup:WTDPower:STEP:TIME MS20
INITiate:WTDPower
"Command the UE to trigger
the measurement"
"and begin its step down
power sequence"
FETCh:WTDPower:COUNT?
FETCh:WTDPower?
```

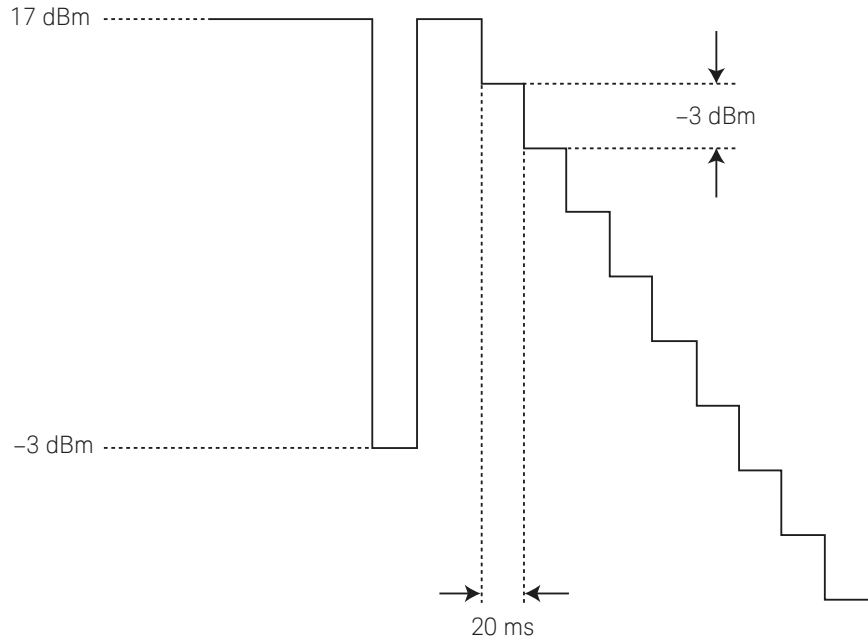


Figure 2. Example UE power sequence

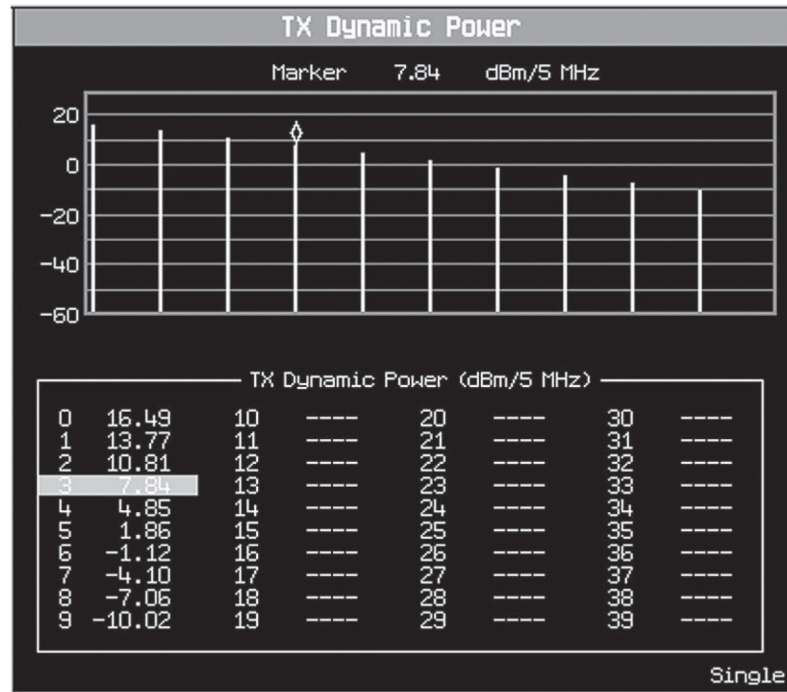


Figure 3. Tx dynamic power measurement result

Operating Considerations

The Tx dynamic power measurement must re-range and re-trigger for every step in the UE's power sequence. To ensure that this process is not interrupted by other operations, it is recommended that you not send any GPIB commands to the test set or press any front panel keys until the measurement has completed. If the measurement misses a trigger, it aborts and returns integrity indicator 30: **Missed Trigger**.

The Tx dynamic power measurement is available in all operating modes. However, it is assumed that the call status is idle as the UE must be operating in a test mode to transmit the required power sequence.

The number of power results returned by the measurement is always 1 + **Number of Power Steps**.

Conclusion

The Tx dynamic power measurement in the 8960 provides fast and accurate power measurements over a wide dynamic range to aid in the calibration of your UE.

For additional information on the Tx dynamic power measurement, see http://wireless.keysight.com/rfcomms/refdocs/wcdma/wcdma_meas_wtdpower_desc.php

myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.

Three-Year Warranty

www.keysight.com/find/ThreeYearWarranty

Keysight's commitment to superior product quality and lower total cost of ownership. The only test and measurement company with three-year warranty standard on all instruments, worldwide.



Keysight Assurance Plans

www.keysight.com/find/AssurancePlans

Up to five years of protection and no budgetary surprises to ensure your instruments are operating to specification so you can rely on accurate measurements.



www.keysight.com/go/quality

Keysight Technologies, Inc.
DEKRA Certified ISO 9001:2008
Quality Management System



Keysight Infoline

www.keysight.com/find/service

Keysight Infoline

Keysight's insight to best in class information management. Free access to your Keysight equipment company reports and e-library.

Keysight Channel Partners

www.keysight.com/find/channelpartners

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

Canada	(877) 894 4414
Brazil	55 11 3351 7010
Mexico	001 800 254 2440
United States	(800) 829 4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 11 2626
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 6375 8100

Europe & Middle East

Austria	0800 001122
Belgium	0800 58580
Finland	0800 523252
France	0805 980333
Germany	0800 6270999
Ireland	1800 832700
Israel	1 809 343051
Italy	800 599100
Luxembourg	+32 800 58580
Netherlands	0800 0233200
Russia	8800 5009286
Spain	800 000154
Sweden	0200 882255
Switzerland	0800 805353
	Opt. 1 (DE)
	Opt. 2 (FR)
	Opt. 3 (IT)
United Kingdom	0800 0260637

For other unlisted countries:
www.keysight.com/find/contactus
(BP-04-23-15)