

# Keysight 8710x Series Coaxial Multiport Switches

Operating and  
Service Manual

# Notices

## Copyright Notice

© Keysight Technologies 2007 - 2019

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

## Manual Part Number

87104-90001

## Edition

Edition 3, March 18, 2019

## Printed in:

Printed in Malaysia

## Published by:

Keysight Technologies  
Bayan Lepas Free Industrial Zone,  
11900 Penang, Malaysia

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Information

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Waste Electrical and Electronic Equipment (WEEE) Directive

This instrument complies with the WEEE Directive marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

### Product category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit <http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

## Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- [www.keysight.com/find/switches](http://www.keysight.com/find/switches)  
(product-specific information and support, software and documentation updates)
- [www.keysight.com/find/assist](http://www.keysight.com/find/assist)  
(worldwide contact information for repair and service)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# Table of Contents

Waste Electrical and Electronic Equipment (WEEE) Directive .....	3
Product category: .....	3
Sales and Technical Support .....	3
List of Figures .....	7
List of Tables .....	9
<b>1 Introduction</b>	
General Information .....	12
Key Features .....	13
<b>2 Switch Configuration</b>	
Driving the Switch .....	16
Standard Drive .....	17
TTL Drive (Option T24) .....	18
Electronic Position Indicators .....	19
<b>3 Installation and Verification</b>	
Installation .....	22
Initial inspection .....	22
Operating and Service Instructions .....	23
Operator's check .....	23
Performance test .....	24
Service instructions .....	24

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## List of Figures

Figure 1-1	Keysight 87106D and 87104D coaxial multiport switches	12
Figure 2-1	Drive connection diagrams for Option 161 and Option 100	16
Figure 2-2	Pin configuration for indicator function	19
Figure 3-1	Connection to perform quick check	23

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.



## List of Tables

Table 1-1	List of Keysight 8710x series coaxial multiport switches	12
-----------	--	----

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# 1 Introduction

General Information 12

Key Features 13

This chapter provides you the overview of Keysight 8710x series coaxial multiport switches.

## General Information

Keysight 87104A/B/C/D SP4T and 87106A/B/C/D SP6T terminated switches provide the life and reliability required for automated test and measurement, signal monitoring and routing applications. These switches can be used in various applications as they are available in multiple frequency ranges, up to 40 GHz.



**Figure 1-1** Keysight 87106D and 87104D coaxial multiport switches

Innovative design and careful process control create switches that meet the requirements for highly repeatable switching elements in test instruments and switching interfaces. The switches are designed to operate for more than 10,000,000 cycles. The exceptional 0.03 dB insertion loss repeatability is warranted for 3 million cycles at 25 °C. This reduces sources of random errors in the measurement path and improves measurement uncertainty. Switch life is a critical consideration in production test systems, satellite and antenna monitoring systems, and test instrumentation. The longevity of these switches increases system uptime and lowers the cost of ownership by reducing calibration cycles and switch maintenance.

**Table 1-1** List of Keysight 8710x series coaxial multiport switches

Model number	Frequency range	Configuration
87104A	DC to 4 GHz	SP4T
87104B	DC to 20 GHz	SP4T
87104C	DC to 26.5 GHz	SP4T
87104D	DC to 40 GHz	SP4T
87106A	DC to 4 GHz	SP6T
87106B	DC to 20 GHz	SP6T
87106C	DC to 26.5 GHz	SP6T
87106D	DC to 40 GHz	SP6T

## Key Features

- SP4T and SP6T configurations
- Magnetic latching
- Operating life of 10 million cycles, typical
- Guaranteed repeatability of 0.03 dB up to 5 million cycles ensure accurate system measurements and reduces calibration intervals
- Excellent isolation, typically > 65 dB at 40 GHz
- Opto-electronic indicators and interrupts
- Terminated ports
- TTL/5 V CMOS compatible (optional)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.


# 2 Switch Configuration

Driving the Switch	16
Standard Drive	17
TTL Drive (Option T24)	18
Electronic Position Indicators	19

This chapter provides you information on how to drive the switches using standard drive and TTL drive. Also included is the configuration to utilize the function of the position indicator.

## Driving the Switch

Each RF path can be closed by applying ground (TTL “High” for Option T24) to the corresponding “drive” pin. In general, all other RF paths are simultaneously opened by internal logic. See [Figure 2-1](#) for drive connection diagrams.

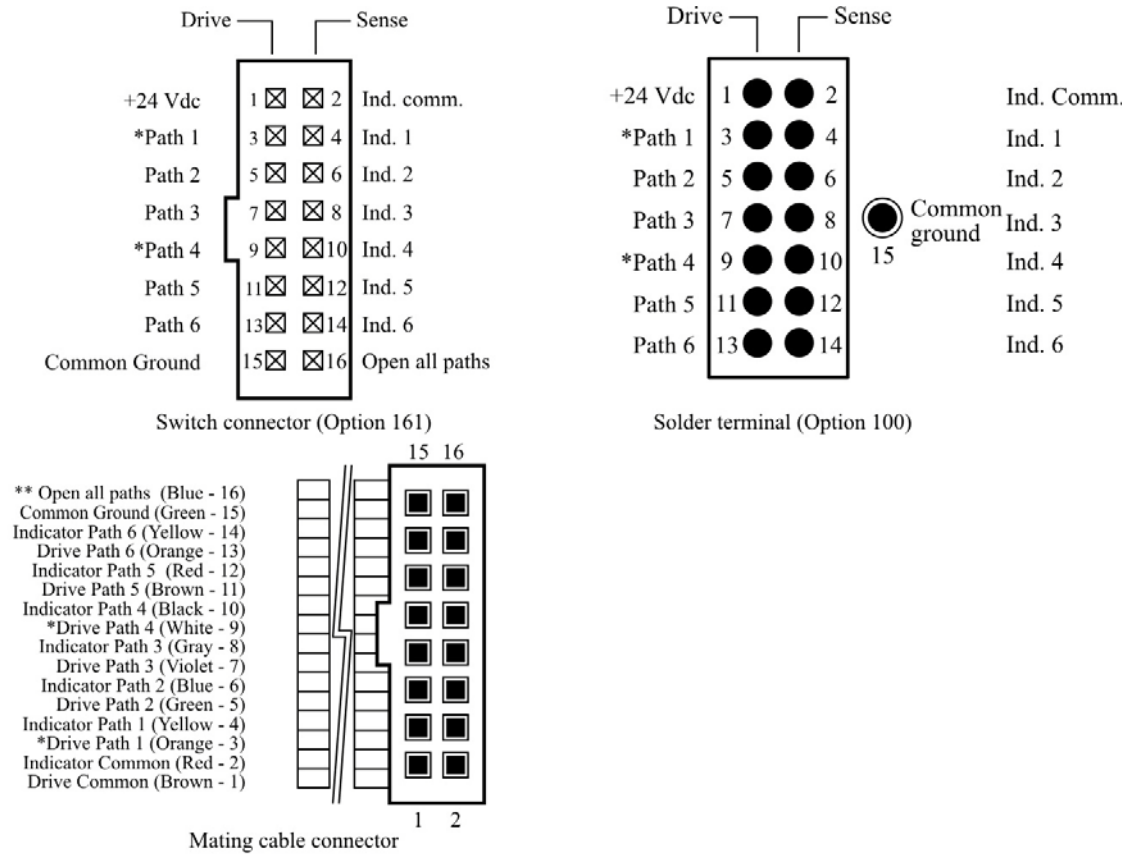

\* Path1 and path 4 are not connected for 87104A/B/0C/D  
 \*\* \*Open all paths pin is not available for option 100

**Figure 2-1** Drive connection diagrams for Option 161 and Option 100

The default operation of the switches is break-before-make. Make-before-break switching can be accomplished by simultaneously selecting the “drive” pins for old RF path and new RF path. Once the new RF path is closed (15 ms), de-select the old RF path “drive” pin while leaving the new RF path “drive” pin selected. The switch circuitry will automatically open the old RF path while leaving the new RF path engaged.



## Standard Drive

- 1 Connect pin 1 to supply voltage (+20 Vdc to +32 Vdc) and pin 15 to ground.

**NOTE**

Pin 15 must always be connected to ground to enable the electronic position-indicating circuitry and drive logic circuitry.

---

**CAUTION**

If pin 15 is not connected to power supply ground, catastrophic failure will occur.

---

- 2 Select (close) desired RF path by applying ground to the corresponding “drive” pin; for example ground pin 3 to close RF path 1.

**NOTE**

After the RF path is switched and latched, the drive current is interrupted by the electronic position-sensing circuitry. Pulsed control is not necessary, but if implemented, the pulse width must be 15 ms minimum to ensure the switch is fully latched.

---

- 3 To select another RF path, ensure that all unwanted RF path “drive” pins are disconnected from ground (to prevent multiple RF path engagement). Ground the “drive” pin which corresponds to the desired RF path.
- 4 To open all RF paths, ensure that all RF path “drive” pins are disconnected from ground. Then, connect pin 16 to ground. This feature is not available in option 100.

## TTL Drive (Option T24)

- 1 Connect pin 1 to supply voltage (+20 Vdc to +32 Vdc) and pin 15 to ground.

### NOTE

Pin 15 must always be connected to ground to enable the electronic position-indicating circuitry and drive logic circuitry.

In addition to the quiescent current supplying the electronic position-sensing circuitry, the drive current flows out of pin 15 (during switching) on TTL drive switches (option T24).

---

### CAUTION

If pin 15 is not connected to power supply ground, catastrophic failure will occur.

---

- 2 Select (close) desired RF path by applying ground to the corresponding “drive” pin; for example apply TTL “High” to pin 3 to close RF path 1.

### NOTE


After the RF path is switched and latched, the drive current is interrupted by the electronic position-sensing circuitry. Pulsed control is not necessary, but if implemented, the pulse width must be 15 ms minimum to ensure the switch is fully latched.

---

- 3 To select another RF path, ensure that all unwanted RF path “drive” pins are at TTL “Low” (to prevent multiple RF path engagement). Apply TTL “High” to the “drive” pin which corresponds to the desired RF path.
- 4 To open all RF paths, ensure that all RF path “drive” pins are at TTL “Low”. Then, apply TTL “High” to pin. This feature is not available in option 100.

## Electronic Position Indicators

The electronic position indicators consist of optically isolated, solid state relays which are driven by photo-electric sensors coupled to the mechanical position of the RF path's moving elements (see [Figure 2-2](#)). The circuitry consists of a common which can be connected to an output corresponding to each RF path. If multiple RF paths are engaged, the position indicator corresponding to each closed RF path will be connected to common. The solid state relays are configured for AC and/or DC operation. The electronic position indicators require that the supply (20 to 32 VDC) be connected to pin 1 and ground connected to pin 15.

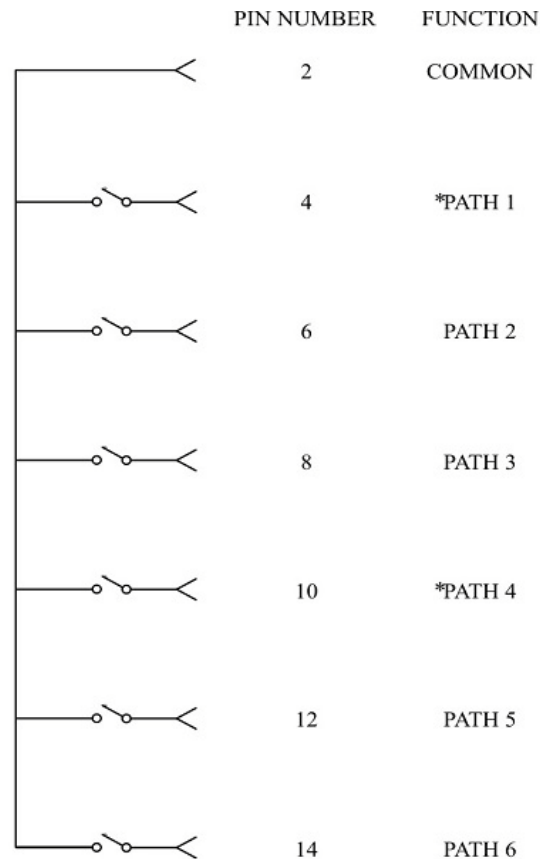

**\*Paths 1 and 4 are not connected for 87104A/B/C/D**

**Figure 2-2** Pin configuration for indicator function

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# 3 Installation and Verification

Installation	22
Operating and Service Instructions	23

This chapter provides you installation information and simple verification steps of the switches.

## Installation

### Initial inspection

- 1** Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked both mechanically and electrically.
  - Check for mechanical damage such as scratches or dents.
  - Procedures for checking electrical performance are given under “**Operator’s check**” on page 23 or “**Performance test**” on page 24.
- 2** If the contents are incomplete, there is mechanical damage or defect, or the instrument does not pass the electrical performance test, contact the nearest Keysight Sales and Service office (refer to “**Sales and Technical Support**” on page 3). Keysight will arrange for repair or replacement of the damaged or defective equipment. Keep the shipping materials for the carrier’s inspection.
- 3** If you are returning the instrument under warranty or for service, repackaging the instrument requires original shipping containers and materials or their equivalents. Keysight can provide packaging materials identical to the original materials. Refer to “**Sales and Technical Support**” on page 3 for the Keysight office nearest to you. Attach a tag indicating the type of service required, return address, model number, and serial number. Mark the container *FRAGILE* to insure careful handling. In any correspondence, refer to the instrument by its model number and serial number.


## Operating and Service Instructions

### Operator's check

The operator's check is supplied to allow the operator to make a quick check on the coaxial multiport switches prior to use or if a failure is suspected.

#### Description

The coaxial multiport switch is connected to a network analyzer configured for the S-parameter measurement. The network analyzer may be set to sweep over the whole or selected frequency range of the switch to be verified. The S-parameter measurement is the best way to determine if the switch is working properly.

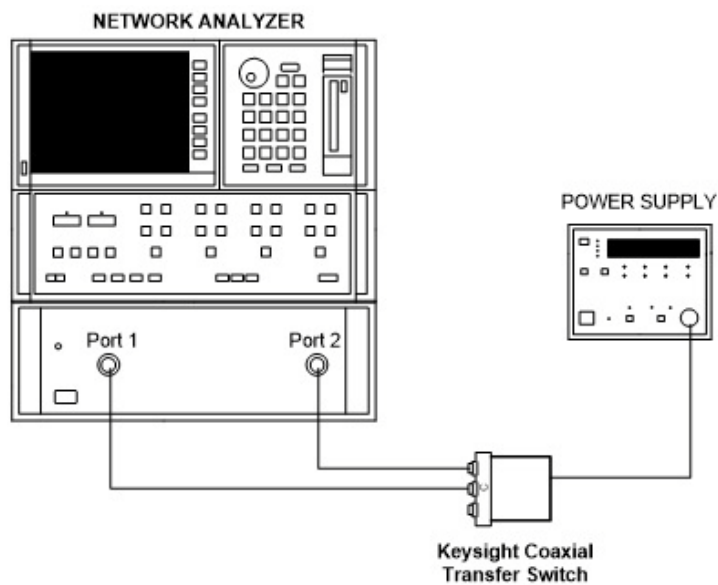

**Figure 3-1** Connection to perform quick check

### Quick check procedure

- 1 Connect the common port of the switch to Port 1 of the network analyzer and one of the outer RF ports to Port 2 of the network analyzer as illustrated in [Figure 3-1](#).
- 2 For standard drive, apply ground to the corresponding “drive” pin to close the selected path. Refer to [“Standard Drive”](#) on page 17.
- 3 For TTL drive (option T24), apply “High” to the corresponding “drive” pin to close the selected path. Refer to [“TTL Drive \(Option T24\)”](#) on page 18.
- 4 Perform the S-parameter measurement and verify against supplemental specifications (cold switching).
- 5 Repeat steps 1 to 4 until all paths are measured and verified.

### Performance test

The coaxial multiport switches can be tested to the accuracy of the specifications with a network analyzer or equivalent equipment of suitable accuracy. If a network analyzer is available, test the instrument using the procedure in the analyzer’s operating manual.

### Service instructions

#### Adjustment and repair

Keysight 8710x series coaxial multiport switches do not require internal adjustments and are not recommended for repair.

#### Maintenance

The connectors, particularly the connector faces, must be kept clean. For instructions on connecting and care of your connectors, refer to the Microwave Connector Care Quick Reference Card (08510-90360).





This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2007 - 2019  
Edition 3, March 18, 2019

Printed in Malaysia



87104-90001

[www.keysight.com](http://www.keysight.com)